



Installation, Use and Maintenance Manual for model

SFK 28

Condensing water heater

CE 0476

SFK 28 - RAD - ING - Manuale - 1807.1_firm.L225A



SUMMARY

INTRODUCTION	4
--------------	---

1. INSTALLER SECTION 7

1.1. INSTALLATION	8
1.1.1. GENERAL INSTALLATION WARNINGS	8
1.1.2. WATER HEATER LOCATION ENVIRONMENTAL REQUIREMENTS	8
1.1.3. REFERENCE LEGISLATION	9
1.1.4. UNPACKING	10
1.1.5. POSITIONING AND MINIMAL TECHNICAL SPACES	11
1.1.6. OVERALL DIMENSIONS	12
1.1.7. JIG	12
1.1.8. RECIRCULATION MODE CIRCULATOR PREVALENCE/FLOW DIAGRAM	13
1.1.9. HYDRAULIC CONNECTION	14
1.1.10. RECIRCULATION MODE	15
1.1.11. D.H.W. PRODUCTION THRU A REMOTE TANK	16
1.1.12. FILLING THE CONDENSATE COLLECTION SIPHON	17
1.1.13. ANTI-FREEZE PROTECTION	18
1.1.14. GAS CONNECTION	19
1.1.15. ELECTRICAL CONNECTION	19
1.1.16. POWER SUPPLY	20
1.1.17. OPTIONAL ELECTRICAL CONNECTIONS	21
1.1.18. FUME EXHAUST FITTINGS	23
1.1.19. INSTALLATION MODES	24
1.1.20. TYPES OF FUME EXHAUST SYSTEMS	26

2. SUPPORT CENTRE SECTION 29

2.1. FIRST START-UP	30
2.1.1. PRELIMINARY OPERATIONS FOR FIRST START-UP	30
2.1.2. WATER HEATER COMMISSIONING	31
2.1.3. CO ₂ VALUE CHECK AND CALIBRATION	32
2.1.4. ACCESSING AND PROGRAMMING THE PARAMETERS	33
2.1.5. DIGITECH CS PARAMETERS TABLE	35
2.2. MAINTENANCE	41
2.2.6. GENERAL MAINTENANCE WARNINGS	41
2.2.7. TECHNICAL DATA	43
2.2.8. TECHNICAL ASSEMBLY	45
2.2.9. HYDRAULIC BOARD	46
2.2.10. WIRING DIAGRAM	48
2.2.11. ACCESSING THE WATER HEATER	49



2.2.12. ACCESSING THE ELECTRONIC BOARD.....	50
2.2.13. EMPTYING THE DOMESTIC SYSTEM.....	51
2.2.14. FAULT SIGNALLING CODES.....	52
2.2.15. ACTIVE FUNCTIONS SIGNALLING CODES.....	55
2.2.16. GAS TYPE TRANSFORMATION.....	56

3. USER SECTION 57

3.1. USE.....	58
3.1.1. GENERAL USE WARNINGS.....	58
3.1.2. CONTROL PANEL.....	59
3.1.3. DISPLAY ICONS.....	60
3.1.4. INFO MENU DISPLAY DATA.....	61
3.1.5. START-UP.....	62
3.1.6. OPERATING MODE.....	62
3.1.7. INFORMATIONAL NOTE ON ANTI-FREEZE FUNCTION.....	62
3.1.8. FAULT SIGNALLING CODES.....	63
3.1.9. ACTIVE FUNCTIONS SIGNALLING CODES.....	65
3.1.10. FAST H2O FUNCTION.....	65
3.1.11. MAINTENANCE.....	66
3.1.12. COVER CLEANING.....	66
3.1.13. DISPOSAL.....	66

INTRODUCTION

WARNING

Before starting any operation it is mandatory to read this instruction manual, in relation to the activities to be carried out as described in each relevant section. Proper operation and optimal performance of the water heater are ensured by strict compliance with all the instructions given in this manual.

The installation, use and maintenance manual is an integral and essential part of the product and must be delivered to the user.

MANUAL USERS

The manual users are all those who install, use and maintain the water heater.

The water heater must be used and accessed only by qualified operators that fully read and understood the use and maintenance manual, paying particular attention to the warnings.

READING AND SYMBOLS OF THE MANUAL

To ease the understanding of this manual, recurrent symbols where used, in particular:

- › On the outer margin of the page is placed a thumb index indicating the type of user to which the instructions in that section address.
- › The titles are differentiated by thickness and size in accordance with their hierarchy.
- › The images contain important parts described in the text, marked with numbers or letters.
- › (See chap “chapter name”): this entry indicates another section in the Manual that you should refer to.

- › Device: this term is used referring to the water heater.



DANGER

It identifies an information related to a general danger that if not complied with, may cause serious personal damage or even death.



ATTENTION

It identifies an information that if not complied with may cause small or medium level lesions to the person or serious deterioration to the water heater.



WARNING

It identifies a precaution information that must be observed in order to avoid damaging the machine or parts of it.

MANUAL STORAGE

The manual must be carefully stored and replaced in case of deterioration and/or low legibility.

If you misplace the use and maintenance manual, you can request it from the Technical Support Centre giving the serial number and model of the water heater indicated on the plate placed on the right side of its casing.

As an alternative, the use and maintenance manual can be downloaded free from the on-line site www.radiant.it, accessing the “download” section and entering the water heater model.



MANUFACTURER WARRANTY AND RESPONSIBILITY

The warranty of the Manufacturer is provided only through its own authorized Technical Support Centres, listed for each Region and Province on the site www.radiant.it, and covers all conformity defects at the moment of sale.

The technical and functional features of the device are ensured by its use in compliance:

1. with the use and maintenance instructions contained in the manuals accompanying the product, the content of which the customer certifies that he is aware;
2. with the conditions and purposes to which assets of the same type are intended.

For more information on the warranty validity, its duration, the obligations and the exemptions, please consult the First start-up certificate attached to this manual.

The manufacturer reserves:

- › the right to modify the tools and relative technical documentation without any obligation to third parties; neither will the company be held responsible for any inaccuracies in this handbook deriving from printing or translation errors;
- › the material and intellectual ownership of this manual and forbids its distribution and duplication, even partial, without prior written authorization.

PRODUCT CONFORMITY

RADIANT BRUCIATORI spa with reference to art. 5 of DPR n 447 dated 06/12/1991, "Regulation implementing of law 5 March 1990, n 46" and in compliance with law 6 December 1971, n 1083 "Safety standards for the use of fuel gas", declares

that its gas water heater are professionally manufactured.

All water heaters obtained their CE certification (D.M. 2 April 1998 regulation implementing art.32 Law 10/91).

The materials used such as copper, brass, stainless steel create a homogeneous, compact and functional assembly, easy to install and manage. In its simplicity, the water heater is equipped with all accessories necessary to render it a veritable independent heating unit. All water heaters are tested and delivered with a quality certificate signed by the tester.



1. INSTALLER SECTION

The installation operations described in this section should be performed only by qualified personnel, having the appropriate technical training in the field for the installation and maintenance of components of civil and industrial domestic hot water production and heating plants.



1. INSTALLATION

1.1. INSTALLATION

1.1.1. GENERAL INSTALLATION WARNINGS



ATTENTION

This machine may be used only for the purpose for which it has been designed: heat water to a temperature below boiling point at atmospheric pressure. Any other use is considered wrong and dangerous. The manufacturer is excluded from any contractual or out of contract responsibility for damage caused to people, animals or property due to errors during installation.



ATTENTION

This water heater should be installed only by qualified personnel, having the appropriate technical training in the field for the installation and maintenance of components of civil and industrial domestic hot water production and heating plants.



ATTENTION

After having removed the packing, make sure the equipment is intact. In case of doubt, do not use the equipment and contact the supplier.

BEFORE INSTALLING THE WATER HEATER, THE INSTALLER MUST MAKE SURE THAT THE FOLLOWING CONDITIONS ARE MET:

- › The device is connected to a heating plant and a water supply network appropriate for its power and performance.
- › The location must be properly vented through an air vent.
- › The air vent must be placed at floor level to prevent it from being obstructed, protected by a grid that does not hamper the useful section of passage.

- › The device is suitable for use with the type of gas available by checking the water heater data plate (placed on the inner side of the front casing).
- › Make sure that the tubes and couplings are perfectly sealed, without any gas leaks.
- › Make sure that the grounding system works properly.
- › Make sure that the electrical systems is suitable for the maximum power absorbed by the equipment, value indicated on the data plate.



WARNING

Use only original RADIANT optional or kit accessories (including electrical).

1.1.2. WATER HEATER LOCATION ENVIRONMENTAL REQUIREMENTS

The device's installation location should be vented due to the presence of threaded joints on the gas adduction line. The location should be therefore provided with vents as to ensure air exchange, with output grid in the natural accumulation area of eventual gas losses.



WARNING

DO NOT install the water heater in a technical compartment near a swimming pool or a laundry, to avoid that the combustion air is exposed to chlorine, ammonia or alkaline agents that may worsen the corrosion phenomenon of the heat exchanger. Failure to observe this caution will void the warranty of the heat exchanger.

**WARNING**

If the temperature in the water heater installation location goes below -10 °C please insert electrical resistances kit (see chapter 'ANTI-FREEZE PROTECTION').

**WARNING**

The manufacturer will not be held responsible for damages caused by incorrect installation not in conformity with the over mentioned instructions and not protected adequately from the freeze.

1.1.3. REFERENCE LEGISLATION

The installation must be realized according to the requirements of current legislation and in compliance with local technical regulations, according to the indications of the good technique.



1. INSTALLATION

1.1.4. UNPACKING



WARNING

Please unpack the water heater just before installing it. The Company is not responsible for the damages caused to the device due to incorrect storage.




WARNING

The packing elements (cardboard box, wooden crate, nails, fasteners, plastic bags, expanded polystyrene, etc.) must be kept out of the reach of children as they may be dangerous. Therefore they should be dismantled suitably differentiating them in accordance with the standards in force.

To unpack the water heater, proceed as follows:

- › Place the packed water heater on the floor (fig. 1-A) and remove the fasteners opening the four flaps of the box outwards.
- › Turn the water heater at 90° holding it with your hand (fig. 1-B).
- › Lift the box (fig. 1-C) and remove the guards (fig. 1-D).

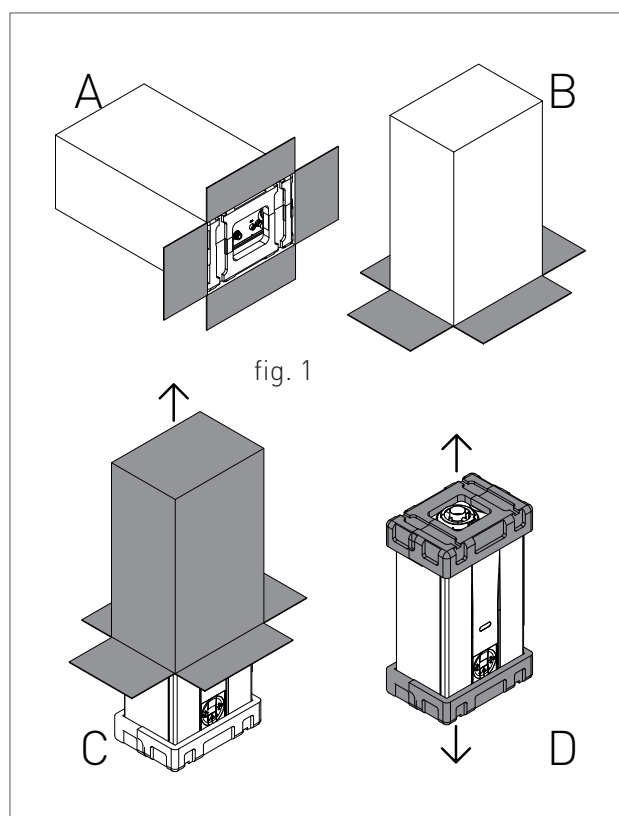


1.1.5. POSITIONING AND MINIMAL TECHNICAL SPACES

The water heater must be installed only on a vertical solid wall, able to sustain its weight.


In order to allow the access inside the water heater for maintenance operations, you have to respect the minimum technical spaces indicated in figure 1.

To facilitate the installation, the water heater is provided with a jig that allows setting in advance the connections to the tubes offering you the possibility of connecting the water heater to completed masonry works.

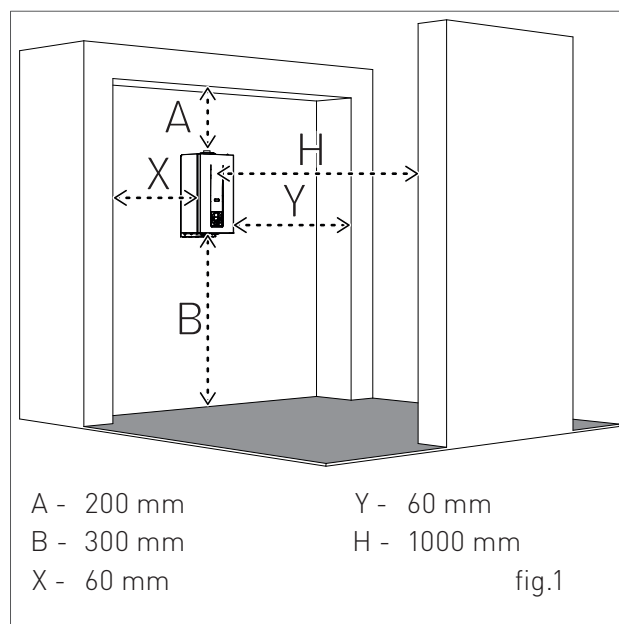

For machine positioning, proceed as follows (see fig. 2):


1. Trace a line using a spirit level (min. length 25 cm) on the installation wall.
2. place the top of the jig along the traced line respecting the distances of the water connections; then mark the two points to insert the two knobs or the fasteners, then trace the points for the fume exhaust fittings;
3. remove the jig and drill the wall;
4. hang the device using the knobs or the bracket and perform the connections.

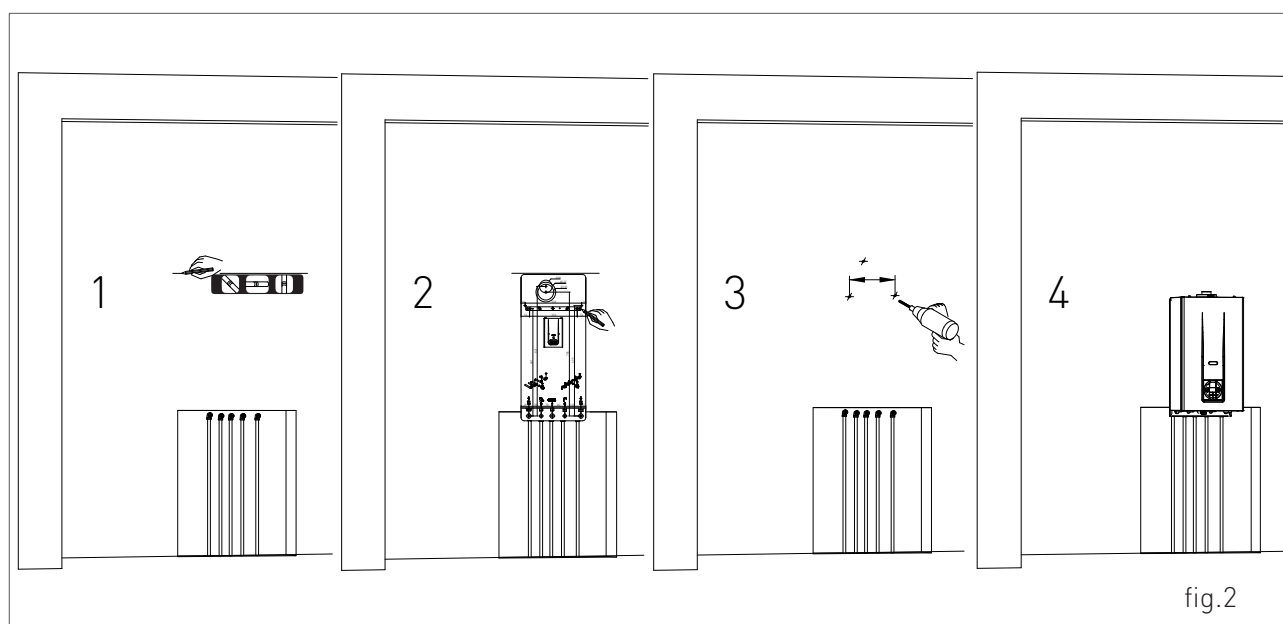




1. INSTALLATION

1.1.6. OVERALL DIMENSIONS

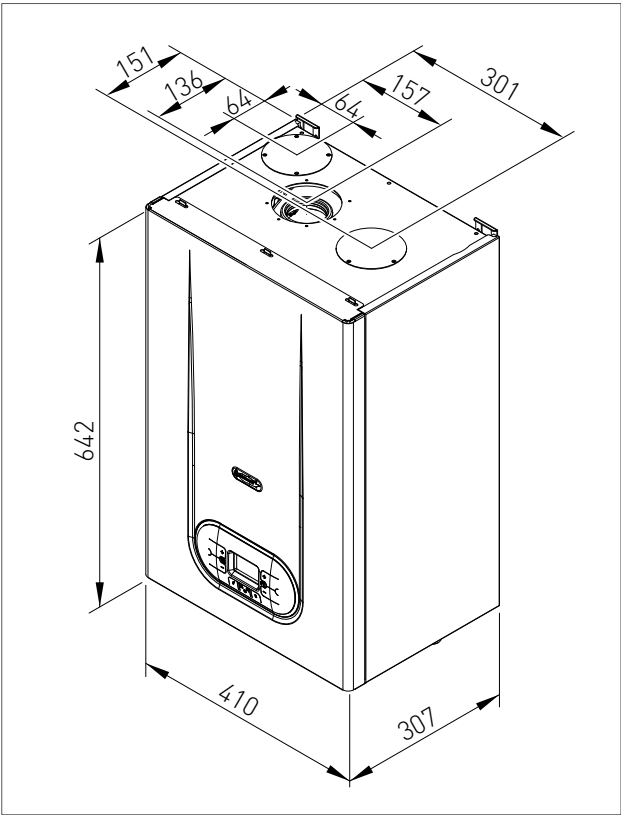

1.1.7. JIG

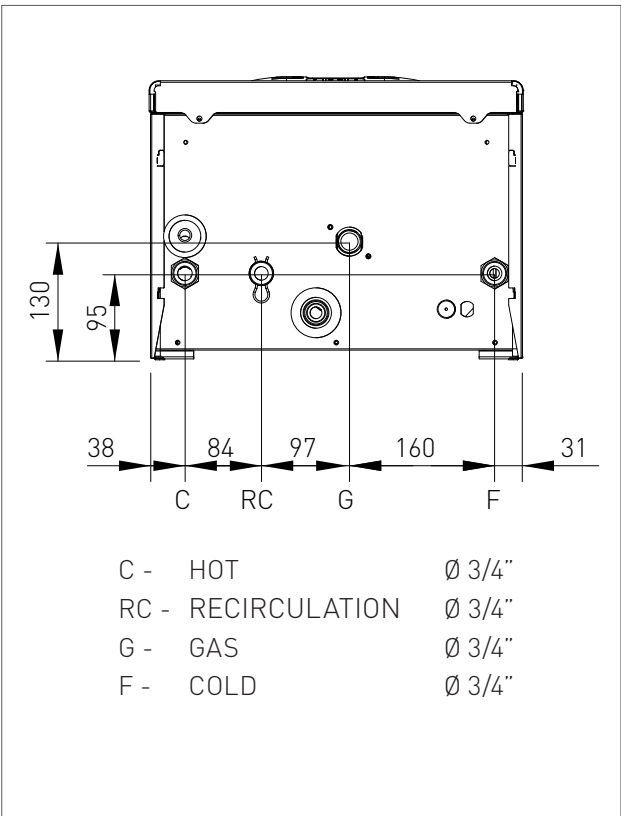

**WARNING**

Make sure, using a level, that the water heater is properly inclined being levelled (see fig.1) so as to allow the condense to drain.


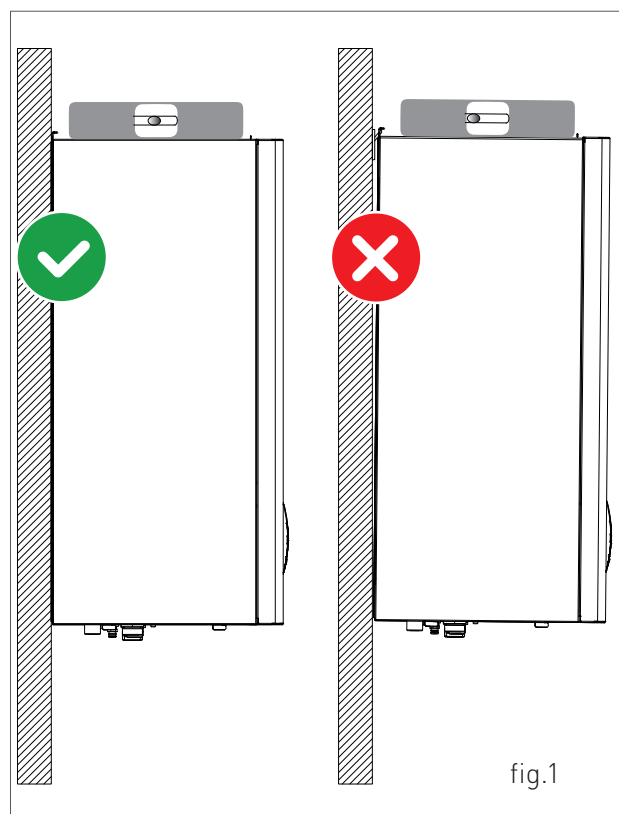


fig.1

1.1.8. RECIRCULATION MODE CIRCULATOR PREVALENCE/FLOW DIAGRAM

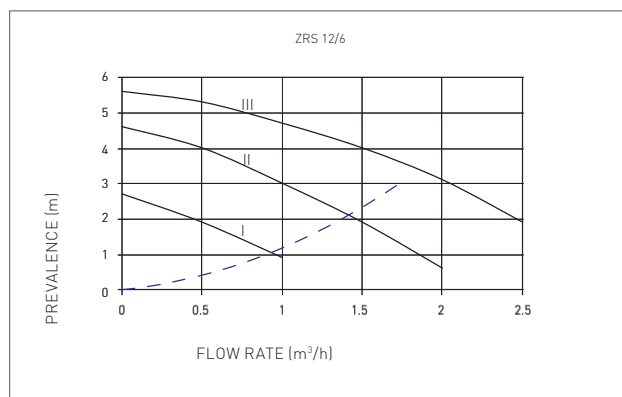

III — Circulator priority maximum speed

II — Circulator head at second speed

I — Circulator head at minimum speed

--- Appliance Loss



1. INSTALLATION

1.1.9. HYDRAULIC CONNECTION



DANGER

Make sure that the tubes of the water and heating plant are not used as grounding system for the electrical plant. There are not suitable for such use.



WARNING

To prevent voiding the warranty and to ensure the proper operation of the water heater, please wash the plant (if possible when hot) with suitable pickling or descaling solutions in order to remove the impurities coming from tubes and radiators.



WARNING

If the water heater is installed in a hydrostatic position lower than those of the user devices (radiators, fan coils, etc.), mount the shut-off valves on the domestic water heating circuit to ease the performance of the maintenance operations if it is necessary only to empty the water heater.



WARNING

When connecting the equipment to water supply, avoid excessive bending and recovery operations from any off axis positioning that may damage the tubes causing leaks, malfunction or early wear.



WARNING

In order to avoid any vibrations and noises, do not use tubes with small diameters or elbows with small radius and significant cut-off of the passage sections.



WARNING

Connect the water heater safety drains to a discharge funnel. The manufacturer is not responsible for any floods due to safety valve opening in case of plant overpressure.

In order to prevent limestone build-up and damages to the domestic water heat exchanger, the hardness of the domestic supply water should not exceed 15 °f. However, please check

the characteristics of the water used and install suitable treating devices.






The heat exchanger coil cleaning frequency depends on the hardness of the supply water and on the presence of solid residues or impurities inside the water that are often present in case of recently installed plants. Based on the characteristics of the infeed water, you should install suitable water treating devices, for residues presence please install a line filter.

The pressure of the cold infeed water should be between 0.5 and 6 bar. In case of greater pressure values, please install a pressure reducer upstream from the water heater.

1.1.10. RECIRCULATION MODE

The tankless water heater has within, as standard, a recirculation system c/w circulating pump which is aimed to provide a better well-being for the domestic hot water needs, thus delivering immediately a large amount of hot water.

To activate the recirculation mode, please proceed as follows:

- › turn the diverter valve onto the position “recirculation”, as shown ‘RC’ in figure 1.
- › activate the recirculation mode by pressing simultaneously the  and  buttons of the control panel (fig. 2). The activation of the recirculation mode is displayed onto the control panel by means of the ‘rc’ symbol.
- › adjust the setting of the return temperature by pressing  and  (fig. 3). The activation of the pump is displayed onto the control panel by means of the pump  symbol.

To detect the return temperature, the system activates the pump for 20 seconds every 10 minutes.

If the temperature detected therein, by the recirculation sensor, is lower than the required one, the pump activates and the appliance operates at the minimum fire rating.

When the required temperature is achieved, the appliance shuts-off and the pump runs for 40 seconds (this latter value can be adjusted by means of parameter P04). The highest possible temperature of the domestic hot water, during the recirculation mode, is of 53 °C. When this temperature is achieved, the appliance shuts-off whilst the pump keeps running. The appliance is activated again when the temperature falls to 50 °C.

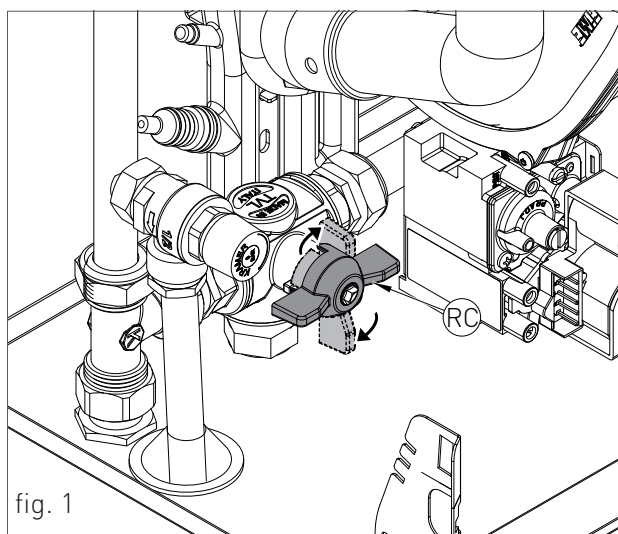


fig. 1

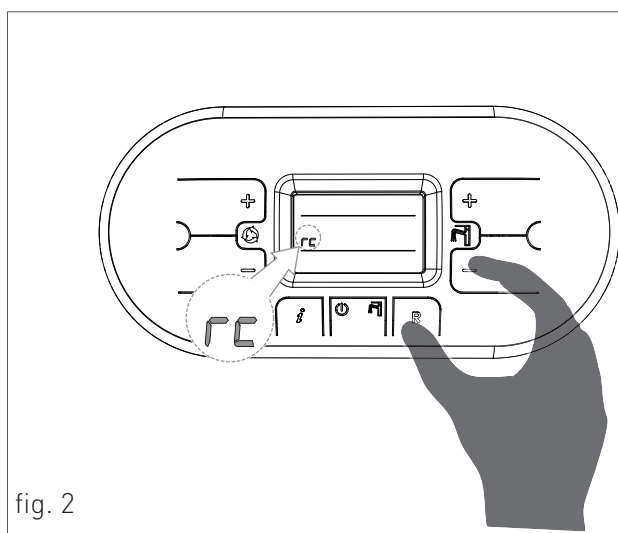


fig. 2

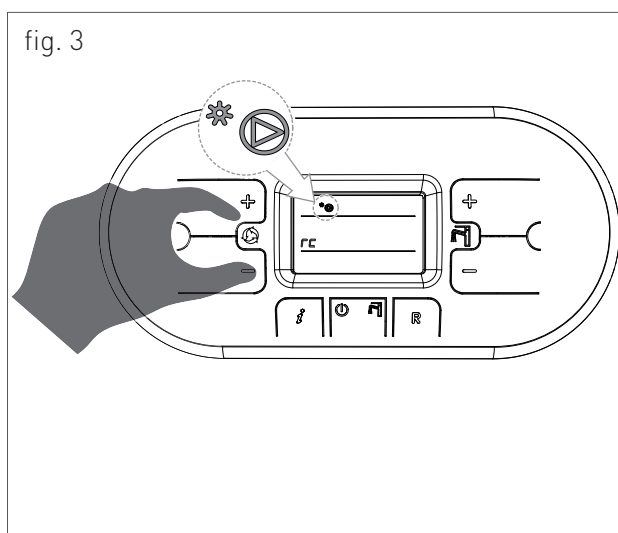


fig. 3



1. INSTALLATION

1.1.11. D.H.W. PRODUCTION THRU A REMOTE TANK

The water heater can also actually feed a remote tank meant for the D.H.W. (domestic hot water) storage. The pump integrated within the water heater, designed ex-factory for the recirculation loop, can load the external tank. This leads to a larger D.H.W. production to satisfy multiple draws from the taps.

To activate this function, please proceed as follows:

- › Turn the three-way valve to the “recirculation” position, as shown in Figure 1 as ‘RC’.
- › Arrange the hydraulic connections as per the scheme ‘D.H.W. PRODUCTION THRU A REMOTE TANK’, as per chapter ‘HYDRAULIC BOARD’.
- › Disconnect the two faston of the recirculation probe (see B-fig. 2), and connect them onto the optional probe meant for the storage (part number: 40-00324, see fig. 2). Insert this latter probe into the sensor-holder of the storage tank.
- › Enter the menu parameters and set the value of the parameter P02 to ‘1’ = STORAGE TANKLESS (see chapters ‘DIGITECH CS PARAMETERS TABLE’ and ‘ACCESSING AND PROGRAMMING THE PARAMETERS’);
- › Set the temperature setpoint of the D.H.W. tank by pressing \oplus and \ominus the sanitary H_2O (fig. 3).

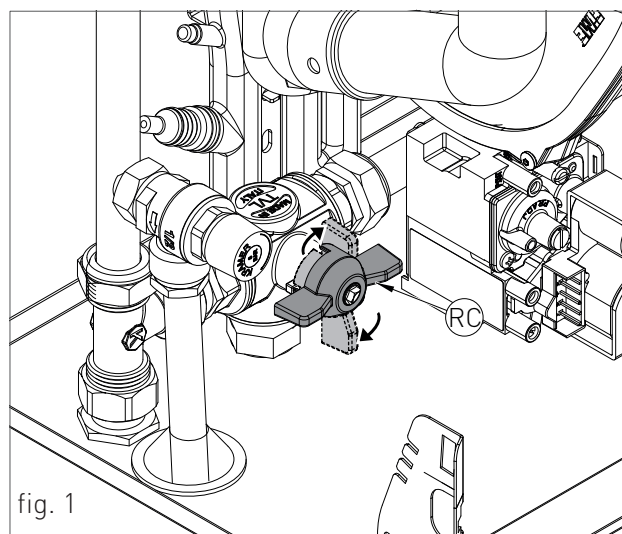


fig. 1

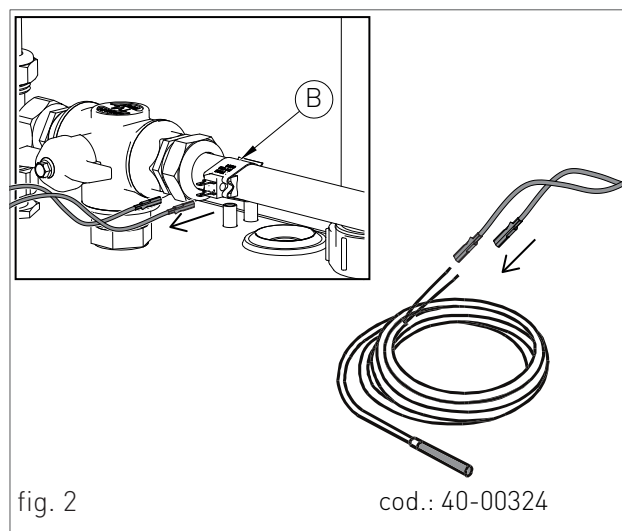


fig. 2

cod.: 40-00324

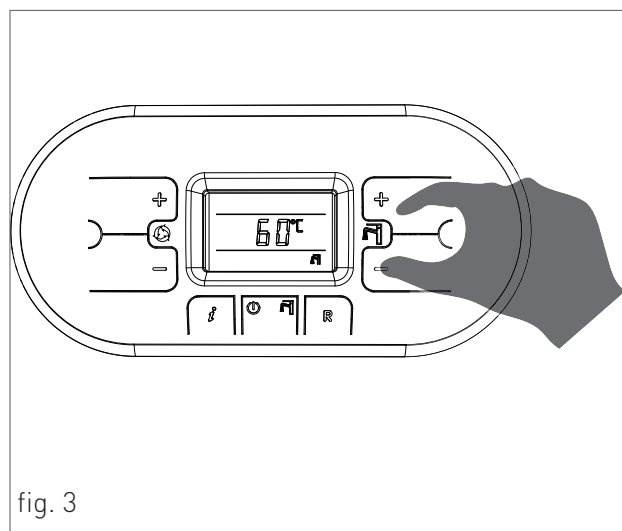



fig. 3

1.1.12. FILLING THE CONDENSATE COLLECTION SIPHON

Before starting the water heater you have to fill the condensate collection siphon in order to avoid fuel reflux through the siphon.

Fill the condensate collection siphon as follows (see fig. 1):

- › With a glass pour the water in the heat exchanger's flue exhaust duct outlet (see fig. 1), up to fill the condensate trap to the highest point "T" (fig. 1);
- › Connect the dedicated flexible condensate draining tube to a waste disposal system. The condensate can be drained directly in the sewerage system by inserting an easily serviceable siphon.

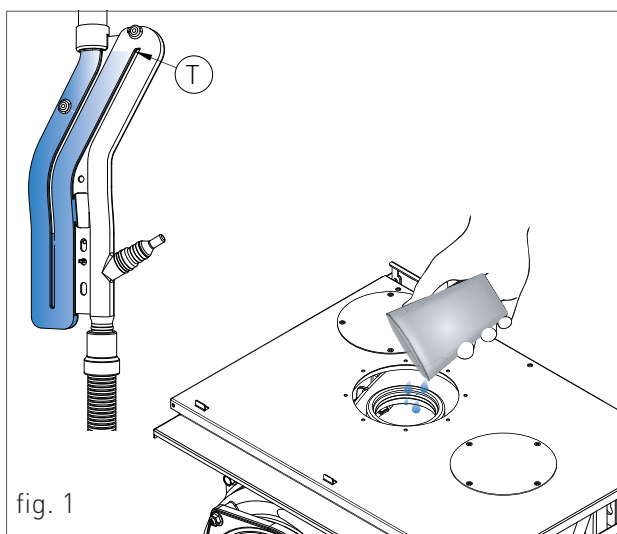



1.1.13. ANTI-FREEZE PROTECTION

The water heater is protected against freezing thanks to the electronic board preparation with functions that start the burner and heat the concerned parts when their temperature goes below the minimum pre-set values, protecting the water heater up to an external temperature of -10°C.

The device starts when the hot water temperature goes below 5 °C, automatically starting the burner until the water reaches the temperature of 15 °C.

The system starts even if on the display appears "OFF", as long as the water heater is connected to the power (230 V) and gas supply.

For long periods of standby, please empty the water heater.

If the temperature goes below -10 °C please insert electrical resistances kit (cod. 82259LP).



1.1.14. GAS CONNECTION



DANGER

In order to connect the gas connector of the water heater to the supply pipe use a stop seal of an appropriate size and material. The use of hemp, teflon tape or similar materials is strictly forbidden.

BEFORE PERFORMING THE GAS CONNECTION, MAKE SURE THAT:

- › the gas adduction line complies with the standards and regulations in force;
- › the tubing's section suits the requested capacity and its length;
- › the tubing is equipped with all safety and control devices required by the standards in force;
- › the internal and external seals of the gas infeed plant are checked;
- › the device is suitable for use with the type of gas available by checking the water heater data plate (placed on the inner side of the front casing. If they do not match you must take the necessary measures to adapt the water heater to another type of gas (see chapter GAS TRANSFORMATION);
- › the gas supply pressure falls within the values indicated on the data plate.

1.1.15. ELECTRICAL CONNECTION



DANGER

The equipment is electrically safe only if it is properly connected to an efficient grounding system, performed in compliance with the safety standards in force. You should check this essential safety requirement. If in doubt, request an accurate check of the electrical system performed by qualified staff, as the manufacturer is not responsible for any damages caused by lack of grounding system.

- › Make sure that the electrical systems is suitable for the maximum power absorbed by the equipment, value indicated on the data plate.
- › make sure that the cables section is appropriate for the maximum power absorbed by the equipment and that it is however not lower than 1 mm².
- › The equipment works with alternating current of 230 V and 50 Hz. The electrical connection must be performed using an all-pole switch with an opening of at least 3 millimetres between contacts placed upstream from the device.



WARNING

Make sure that the phase and neutral cables connection is performed in compliance with the wiring diagram (see chapter POWER SUPPLY).



WARNING

It is strictly forbidden the use of adaptors, multiple plugs and/or extensions for the general power supply of the equipment from the electrical network.



1. INSTALLATION

1.1.16. POWER SUPPLY

To power the water heater connect the electrical cables to the terminal inside the control panel as follows:



DANGER

Cut off the voltage from the main switch.

- › remove the water heater's front casing (refer to chapter ACCESSING THE WATER HEATER).
- › loosen the two screws and remove the plate "A" (see fig. 1).
- › after removing the plate, connect the electrical cables to terminal "B" (see fig. 1):
 - the yellow/green cable to the terminal marked with grounding symbol "⏏".
 - the blue cable to the terminal marked with "N".
 - the brown cable to the terminal marked with "L".

After performing these operations, remount plate "A" and the front casing.

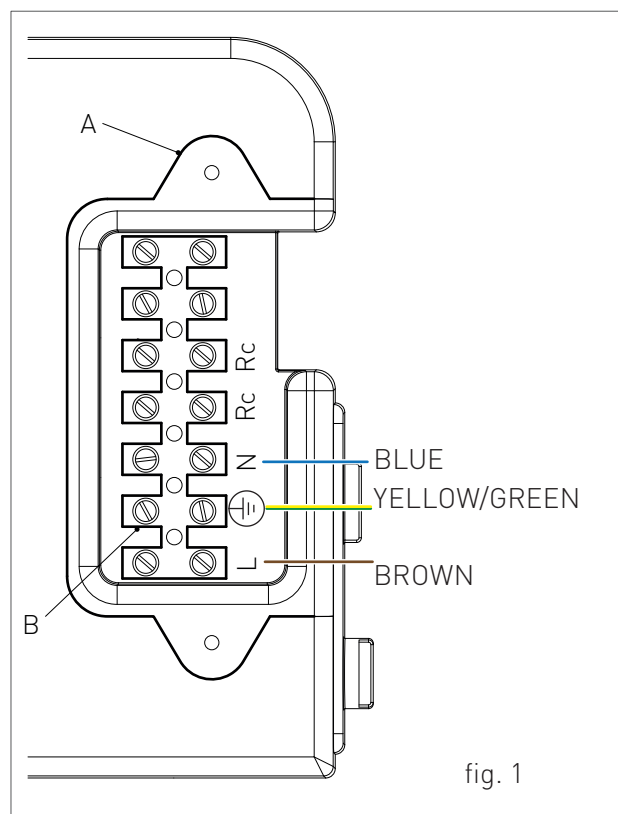


fig. 1

1.1.17. OPTIONAL ELECTRICAL CONNECTIONS

The cables should be inserted inside the water heater using the cable glands 'P1' and 'P2' placed under the board (see fig. 1). Make a hole on the cable gland, smaller than the cable diameter, to make sure that the air cannot pass through.

To wire the optional below:

[TP] DOMESTIC HOT WATER PRE-HEATING DEACTIVATION TIMER



use the terminal placed inside the control panel as follows:



DANGER

Cut off the voltage from the main switch.

- › remove the front casing of the water heater (see chapter ACCESSING THE WATER HEATER); unscrew the screws and remove plate "A" (see fig. 2).
- › After removing the plate, connect the electrical cables to terminal "B" (see fig. 2);
- › After performing these operations, remount plate "A" and the front casing.

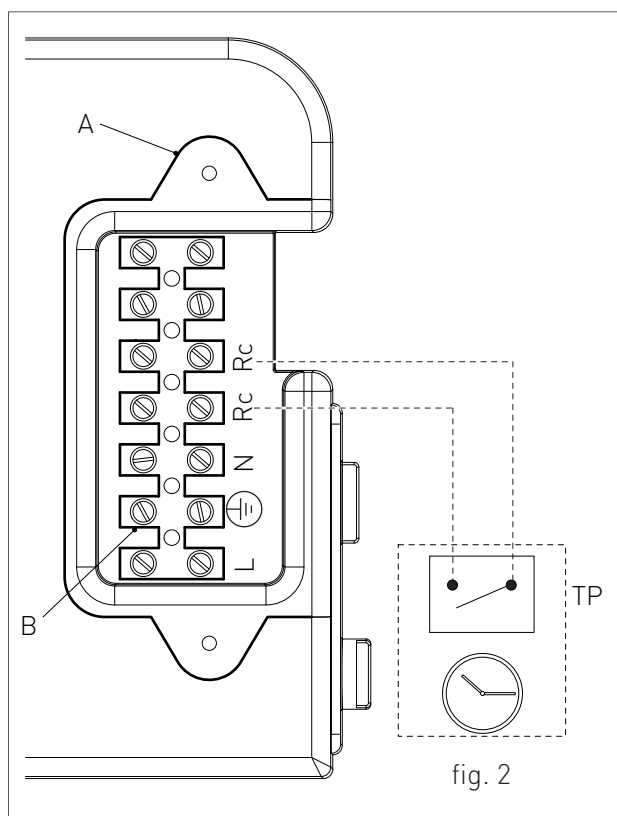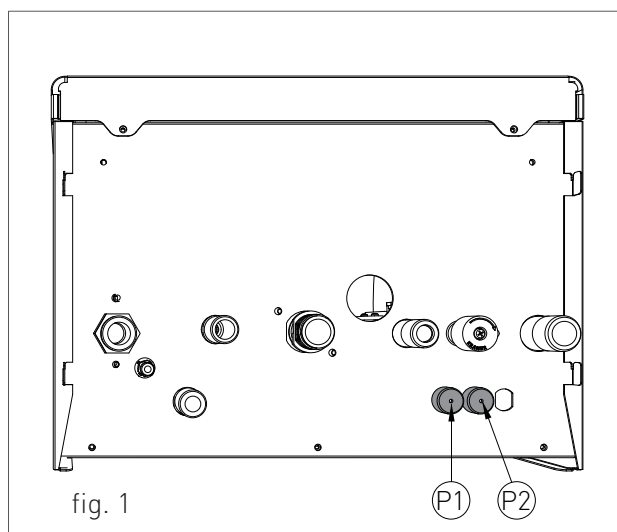



1. INSTALLATION

To wire the optionals below:

(CR) REMOTE CONTROL OPEN THERM CODE 65-00626 (CABLE + REMOTE CONTROL)

use the electronic board placed inside the control panel as follows:



DANGER


Cut off the voltage from the main switch.

- › remove the boiler's front casing (refer to chapter ACCESSING THE WATER HEATER).

- › remove the crankcase of the control panel (see chapter ACCESSING THE ELECTRONIC BOARD).

- › after removing the crankcase, connect the items below to the electronic board (see fig. 3):

After performing these operations, remount the crankcase and the front casing.

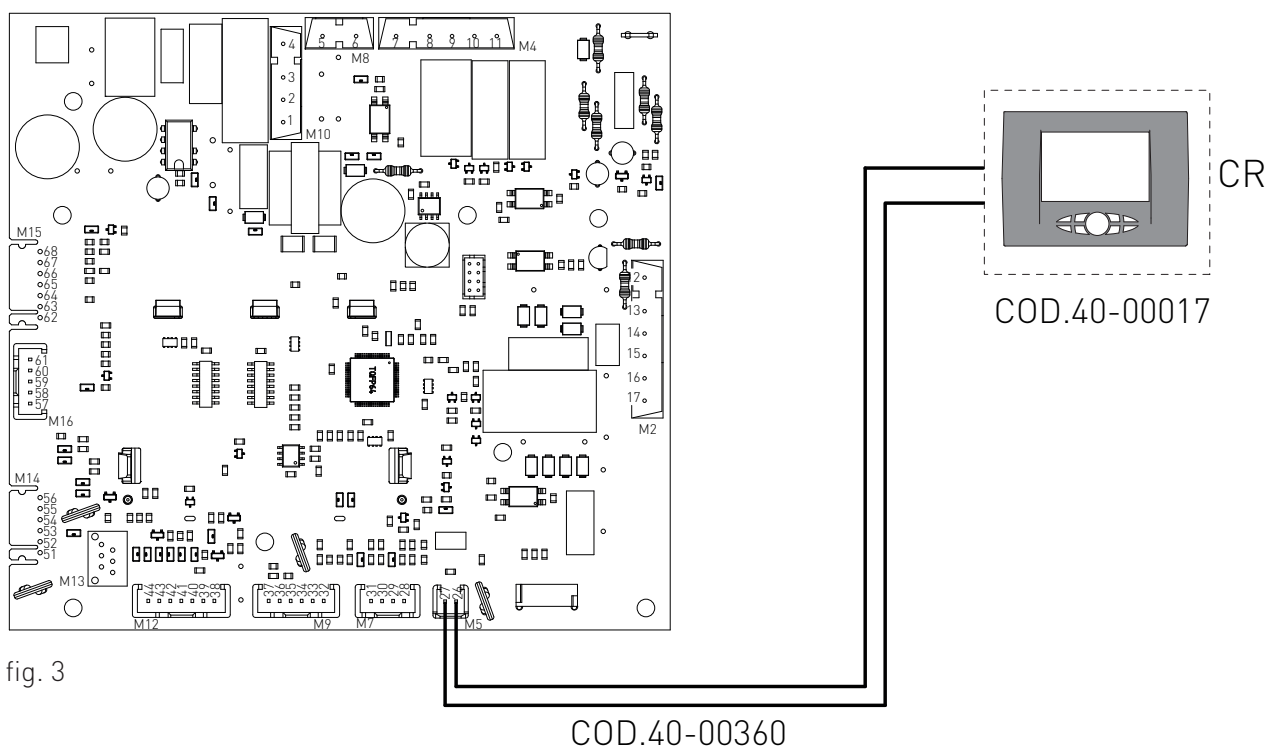

1.1.18. FUME EXHAUST FITTINGS

**WARNING**

In order to ensure proper operation and efficiency of the device you have to connect the water heater fume exhaust fitting to the fume exhaust duct using appropriate polypropylene flue fittings for condensing water heaters. It is recommended to install discharge systems approved by Radiant.

**WARNING**

You cannot use traditional flue fittings for the discharge ducts of the condensing water heaters, nor vice versa.

**WARNING**

For fumes exhaust and condensate collection, please follow the technical standards in force.

For all discharge ducts, with regard to the fumes path, you should provide an uphill slope (outwards) so as to favour the reflux of the condensate towards the combustion chamber, suitably realized to collect and drain acid condensate.

- › For all air suction ducts, with regard to the air path, you should provide an uphill slope (towards the water heater) so as to avoid the protrusion inside the duct of rain water, dust or foreign objects.
- › In case of horizontal co-axial system installation, correctly place the horizontal co-axial terminal suitably realized to respect the slopes inside the fumes duct and to protect the air suction duct from adverse weather conditions.
- › In order to discharge the fumes through a fumes exhaust duct carefully follow the technical standards in force.
- › Make sure that the discharge tube does not protrude inside the fumes exhaust duct, stop before it reaches the inner surface of the latter.

- › The discharge duct must be perpendicular with the opposite internal wall of the chimney or of the fumes exhaust duct (fig. 1).

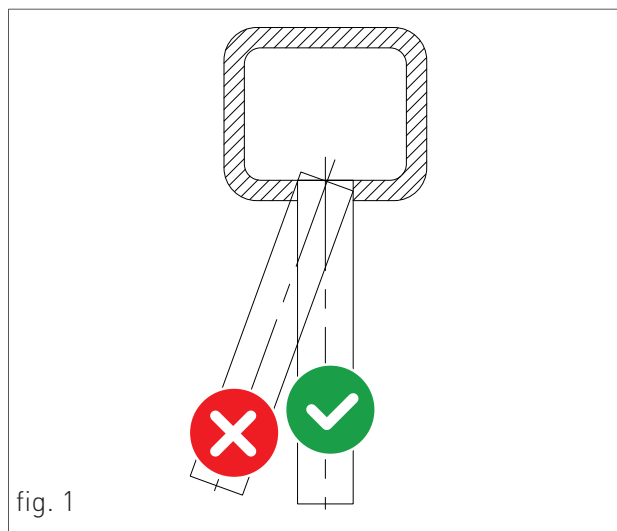


fig. 1



1. INSTALLATION

1.1.19. INSTALLATION MODES

For this type of water heater are available the following fumes discharge configurations: B23P, B33, C13, C33, C43, C53, C63, C83 e C93 (see Fig. 1).

- › B23P- Indoor suction and outdoor discharge.
- › B33-Indoor suction and fumes exhaust duct discharge.
- › C13- Concentric wall discharge. The tubes can be split but the outputs must be concentric or close enough to each other to undertake similar wind conditions (within 50 cm).
- › C33- Roof concentric discharge. Outputs as for C13.
- › C43-Discharge and suction in common separated fume exhaust ducts, subjected to similar wind conditions.
- › C53-Roof or wall separated discharge and suction, in areas with different pressures. The suction and discharge inlets should not be placed on opposite walls.
- › C63- Discharge and suction systems made with tubes commercialized and certificated separately.
- › C83-Discharge in single or common fume exhaust duct and wall suction system.
- › C93- Discharge through an intubated conduct to a vertical terminal. The technical compartment in which is housed the discharge, also plays the role of combustion air suction duct through the gap that will be formed.

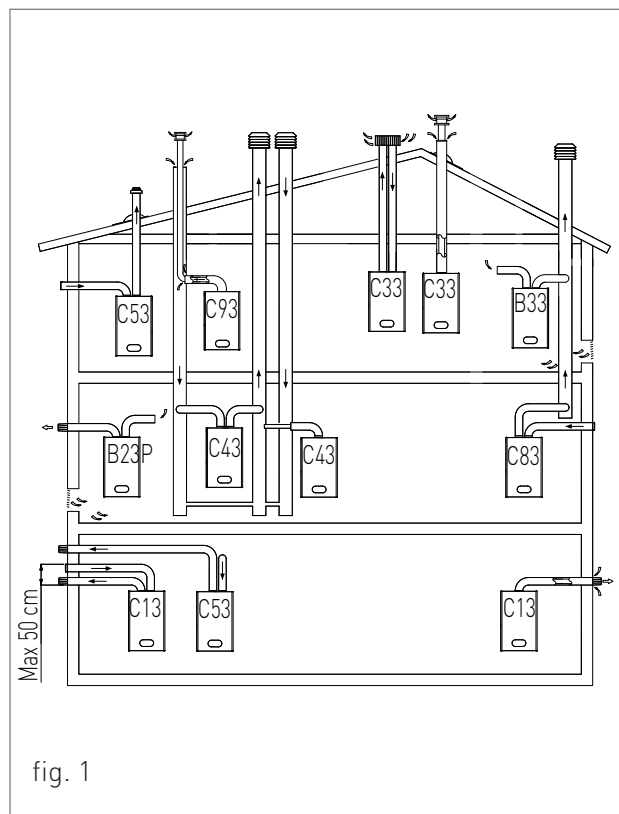


fig. 1

DISCHARGE OF COMBUSTION PRODUCTS FOR C63-TYPE DEVICES

Each flue fitting has a resistance factor that correspond to a certain tube length (of the same diameter) expressed in metres. These data are provided by the flue fittings distributor. Each water heater has a maximum allowed resistance factor, expressed in Pascal, corresponding to the maximum tubes length with any type of Kit. The maximum allowed strength factor of the ducts installed in this water heater, that should not be exceeded, is specified in the 'TECHNICAL SPECIFICATIONS' section. All this information allow us to perform the necessary calculations to check the possibilities of realizing the most diverse flue fitting configurations.

The ducts must be certified for this specific use and for a temperature greater than 100 °C.

The gas devices, provided with connection for fumes exhaust tube, must be directly connected to efficient chimneys or fume exhaust ducts: only if these are missing you can discharge the combustion products directly through the gas devices.

The connection to the chimney or to the fume exhaust ducts must respect the following requirements:

- Be sealed and realised in materials suitable to resist normal mechanical stress, heat, the action of combustion products and any condensate forming;
- have no more than three changes in direction, including the chimney and/or fume exhaust duct inlet connection, made with internal angles greater than 90°. The changes in direction must be made only by using curved curved elements;
- have the axis of the inlet end perpendicular to the internal wall opposite to the chimney or fume exhaust duct;
- have, along its entire length, a section equal to or greater than that of the connection of the device discharge tube;
- have no shut-off devices (shutters).
- for direct external discharge there must be no more than two changes in direction.

- permanent openings on the external walls of the location (windows);
- single or collective, ramified ventilation ducts.

The openings on the external walls of the location must respect the following requirements:

- have a net overall free passage section of at least 6 cm^2 for every kW of heat capacity installed with a minimum of 100 cm^2 ;
- they must be realized so as to make sure that the opening inlets are not obstructed (neither indoors nor outdoors);
- they must be protected with grids, metal meshes, etc. so as to keep the useful section mentioned above.
- they must be placed at a height next to the floor level such as to allow proper operation of the combustion products discharge systems; if such position can not be obtained, please increase by at least 50% the section of the vents.

The locations in which are installed gas devices must be vented so as to ensure the amount of air necessary for a regular combustion and for location ventilation. The natural air intake must take place directly through:



1. INSTALLATION

1.1.20. TYPES OF FUME EXHAUST SYSTEMS

KIT K - HORIZONTAL CO-AXIAL SYSTEM Ø60/100 INTERNAL POLYPROPYLENE DUCT ADJUSTABLE AT 360°.

It allows fumes discharge and air intake from external wall.

Suitable only for condensing boilers.

It allows fuel gas discharge and air intake for combustion through co-axial ducts, the external one for air intake, the plastic internal one for fumes discharge.



PLEASE SEE THE MAXIMUM DISCHARGE LENGTH IN THE TABLE IN CHAPTER "TECHNICAL DATA".

The maximum discharge length (or linear reference length) can be calculated summing the length of the linear tube and that equivalent to each additional curve with respect to the first.

Subsequent addition of a curve is similar to adding a linear length of tube according to the indications below:

co-axial curve Ø60/100 at 90° = 1 m

co-axial curve Ø60/100 at 45° = 0.6 m

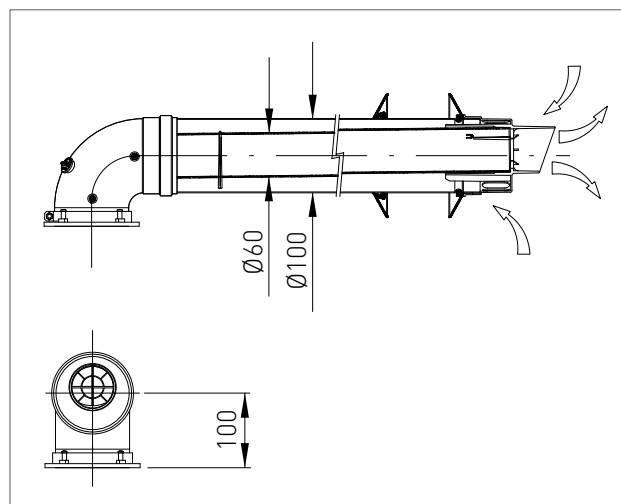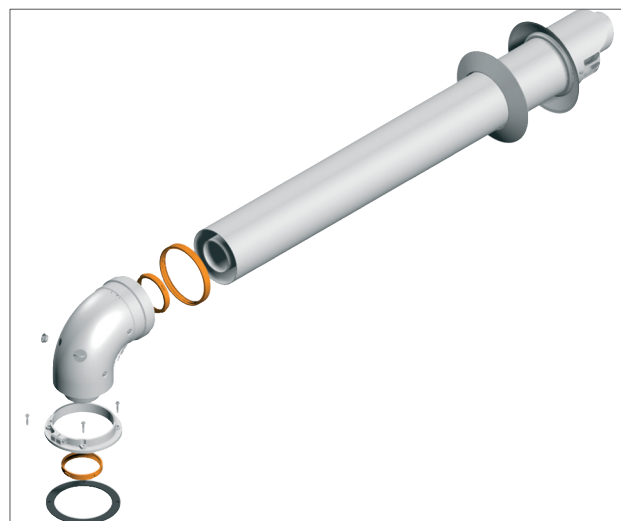

KIT H - HORIZONTAL SPLIT SYSTEM Ø80/80 MADE OF POLYPROPYLENE, ADJUSTABLE AT 360°.

The two tubes system allows fumes discharge through the fumes exhaust duct and air intake from outside.

Suitable only for condensing boilers.

It allows discharging fuel gas and air suctioning for combustion through two separated ducts.



PLEASE SEE THE MAXIMUM DISCHARGE AND INTAKE LENGTH IN THE TABLE IN CHAPTER "TECHNICAL DATA".

The maximum discharge and intake length (or linear reference length) can be calculated summing the length of the linear tube and that equivalent to each additional curve with respect to the first.

Subsequent addition of a curve is similar to adding a linear length of tube according to the indications below:

curve Ø80 at 90°= 1.5 m

curve Ø80 at 45°= 1.2 m

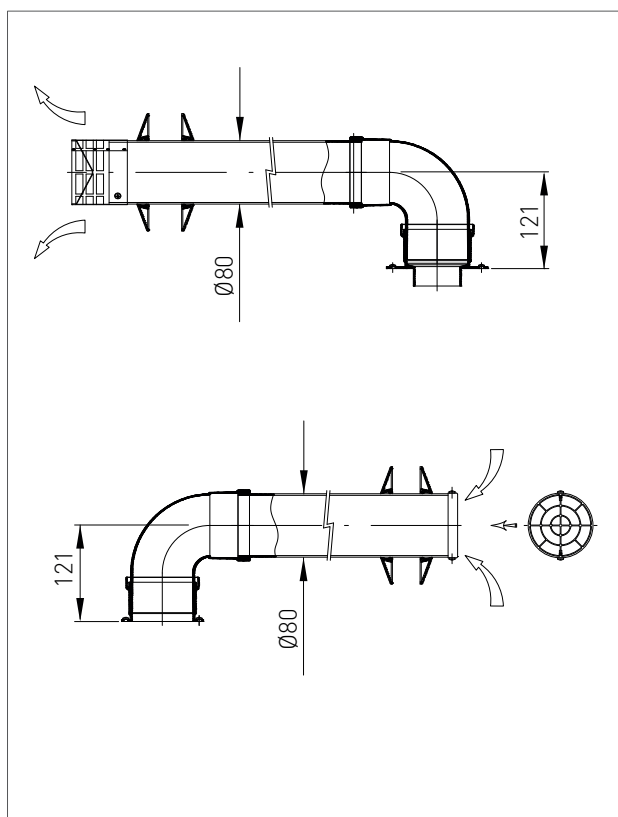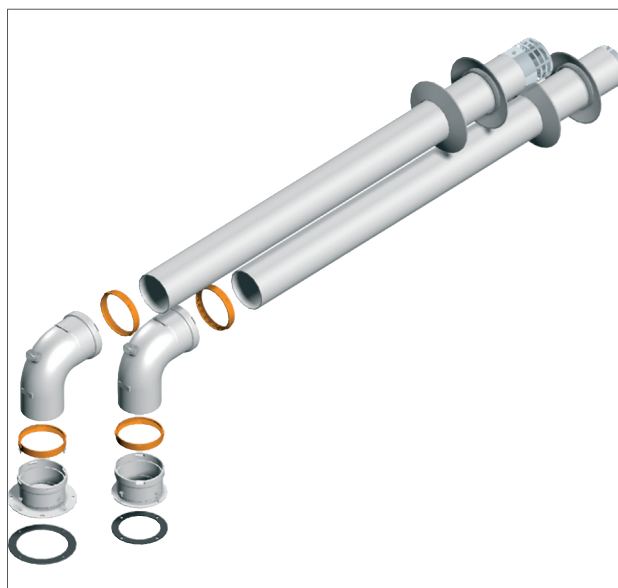



1. INSTALLATION

KIT V - VERTICAL CO-AXIAL SYSTEM Ø60/100 INTERNAL POLYPROPYLENE DUCT.

It allows fumes discharge and air intake directly from roof.

Suitable only for condensing boilers.

It allows fuel gas discharge and air intake for combustion through co-axial ducts, the external one for air intake, the plastic internal one for fumes discharge.



PLEASE SEE THE MAXIMUM DISCHARGE LENGTH IN THE TABLE IN CHAPTER "TECHNICAL DATA".

The maximum discharge length (or linear reference length) can be calculated summing the length of the linear tube and that equivalent to each additional curve with respect to the first.

Subsequent addition of a curve is similar to adding a linear length of tube according to the indications below:

curve Ø60/100 at 90° = 1 m

curve Ø60/100 at 45° = 0.6 m

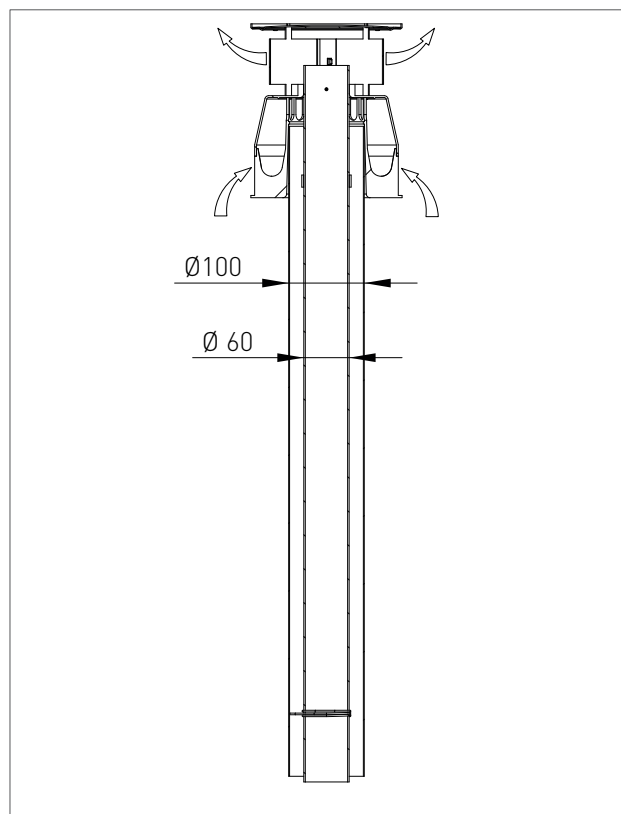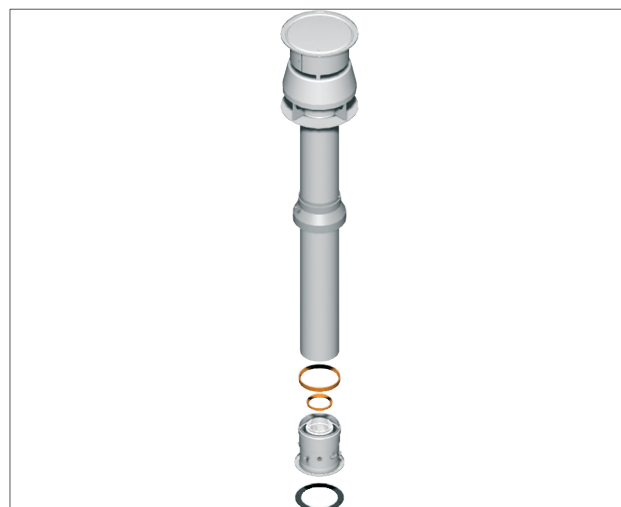



2. SUPPORT CENTRE SECTION

All operations described below relative to first start-up, maintenance and replacement should be performed only by qualified personnel and authorized by RADIANT BRUCIATORI S.p.A.



2.1. FIRST START-UP


2.1.1. PRELIMINARY OPERATIONS FOR FIRST START-UP

The first start-up operations consist in checking the correct installation, adjustment and operation of the device. Proceed as follows:

- › check the inner system sealing in accordance with the indications provided by standard and regulations in forced;
- › check if the gas used is suitable for the water heater;
- › check if the gas capacity and relative pressures comply with those on the plate;
- › check the intervention of the safety device in case of lack of gas;
- › make sure that the device supply voltage corresponds with that on the plate (230 V – 50 Hz) and that the wiring is correct;
- › make sure that the grounding system works properly;
- › make sure that the combustion air adduction and fumes and condensate discharge take place properly in compliance with the Local and National Laws and Standards in force;
- › make sure that the fumes discharge tube and its connection to the fume exhaust duct comply with the requirements of the Local and National Laws and Standards;
- › make sure that the heating system gate valves are open;
- › make sure that there is no intake of gaseous products within the system;
- › make sure that there are no flammable liquids or materials near the device;
- › open the water heater gas tap and make sure that there are no gas leaks upstream from the device (the burner gas connection must be checked while the machine is running);
- › in case of new installation of the gas supply network, the air inside the tubes may block the device at its first start-up. You might have to repeat the start-up procedure to purge all the air inside the tube.

2.1.2. WATER HEATER COMMISSIONING

Proceed with water heater commissioning as follows:


- › power the water heater;
- › open the gas tap;
- › ignite the unit by pressing the button ;
- › open the D.H.W. taps at the maximum flow rate;
- › the unit is ignited.



WARNING

Please make sure all the air is flushed-off by means of the drain valve located within the unit (A - figure 1) and thru the air separator plug (B - figure 1).

- › If the flame is missing the board will repeat the start-up operations after post-ventilation (20 seconds).
- › You might have to repeat the start-up operation several times to release all air inside the gas tube. Before repeating the operation, wait at least 5 seconds from the last start-up attempt and unlock the water heater from "E01" error code by pressing the Reset  key.

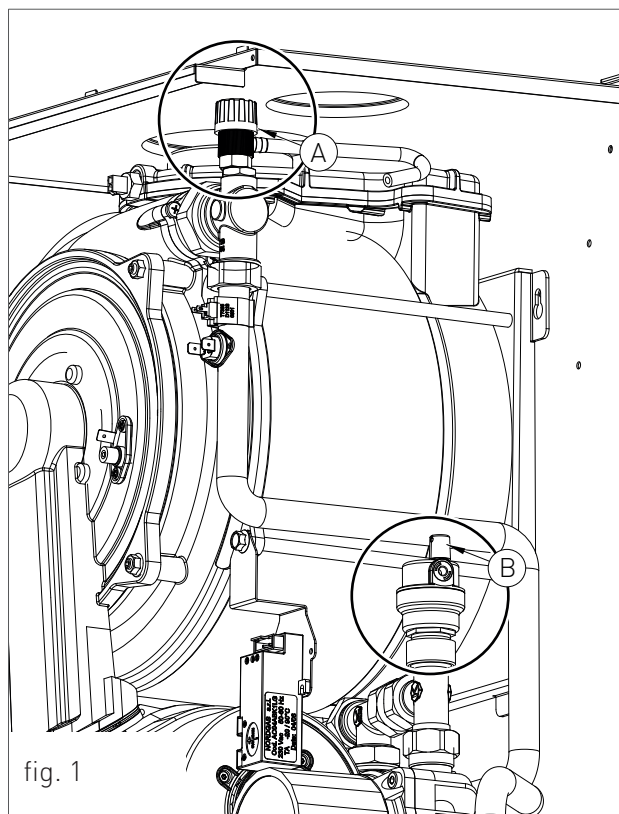

2.1.3. CO₂ VALUE CHECK AND CALIBRATION



WARNING

The CO₂ value should be checked with the casing assembled, while the gas valve should be adjusted with the casing open.

To check and calibrate the CO₂ value to minimum and maximum power proceed as follows:

FOR MINIMUM POWER

- › Access parameter 'P06' following the procedure described in chapter "ACCESSING AND PROGRAMMING THE PARAMETERS" and stay in edit mode until the calibration is completed (the maximum time before forced exiting the edit mode is 7 minutes).
- › Insert the fumes analyser probe in the suitable 'PF' fumes inlet (fig. 1), then make sure that the CO₂ value complies with the requirements indicated in chapter "Technical data", otherwise unscrew the protection screw 'A' (fig. 2) and adjust using a 4 Allen wrench the screw '2' (fig. 2) of the Off-Set adjuster. To increase the CO₂ value, turn the screw clockwise and vice-versa if you want to decrease it.
- › Once completed the adjustment, tighten the protection screw 'A' (fig. 2) on the Off-Set adjuster.
- › Exit parameter 'P06' following the procedure described in chapter "ACCESSING AND PROGRAMMING THE PARAMETERS".

FOR MAXIMUM POWER

- › Open several D.H.W. taps at the highest flow rate.
- › Access parameter 'P07' following the procedure described in chapter "ACCESSING AND PROGRAMMING THE PARAMETERS" and stay in edit mode until the calibration is completed

(the maximum time before forced exiting the edit mode is 7 minutes).

- › Then make sure that the CO₂ value complies with the indications in "Technical data", otherwise adjust using screw '1' (fig. 2) of the gas flow adjuster. To increase the CO₂ value, turn the screw anti-clockwise and vice-versa if you want to decrease it.
- › After each adjustment variation on screw '1' (fig. 2) of the gas flow adjuster you have to wait for the water heater to stabilize itself to the set value (about 30 seconds).
- › Enter again the parameter P06 and make sure that the CO₂ value did not change to minimum, if changed repeat the calibration described in the previous paragraph.

fig. 1


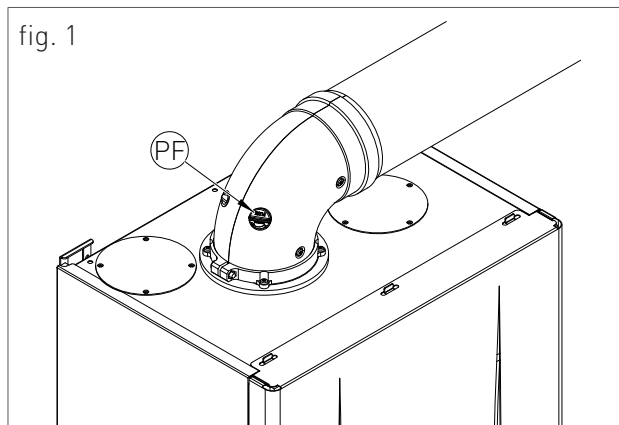



fig. 2





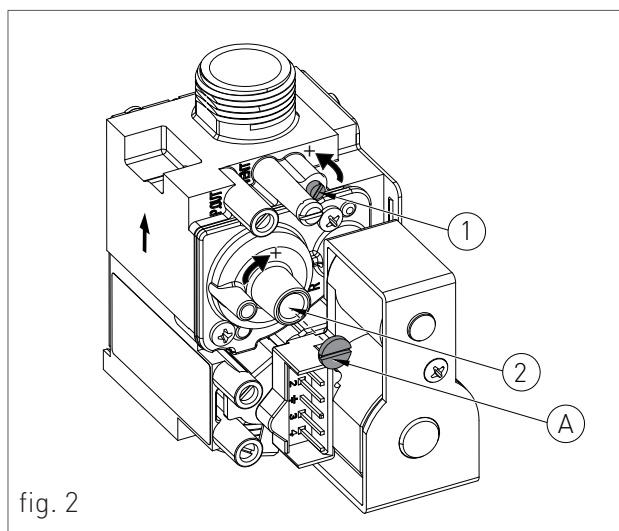


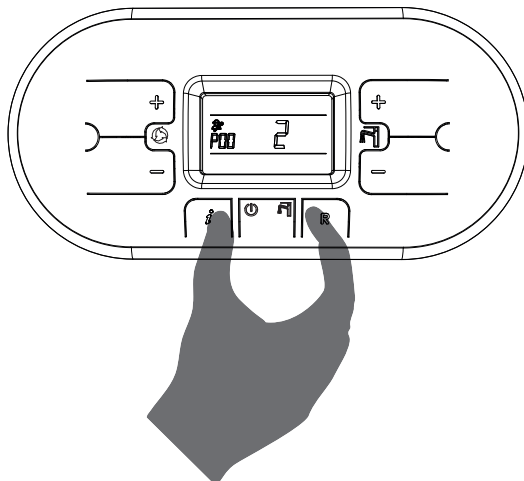
2.1.4. ACCESSING AND PROGRAMMING THE PARAMETERS

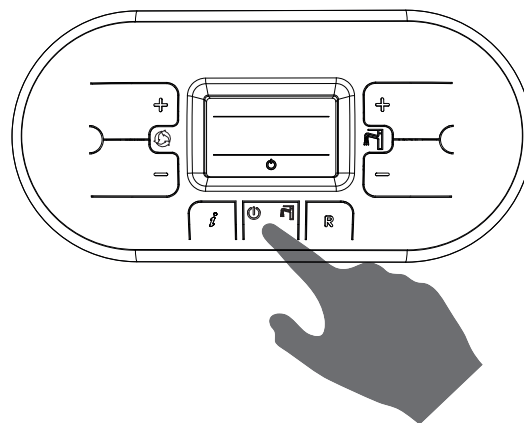


To access the parameters menu and adjust their values, follow the procedure below:


1. Press the button  to select the OFF mode displayed using the symbol .




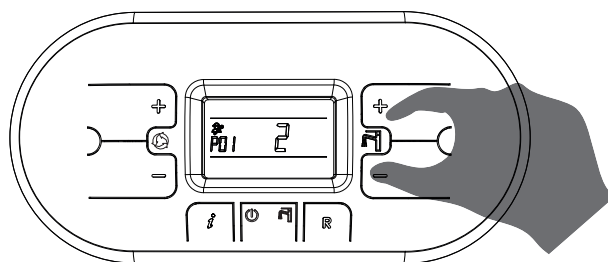
2. Hold at the same time the keys  and  until on the display appears the symbol  with the message 'P00', and release the keys  and .




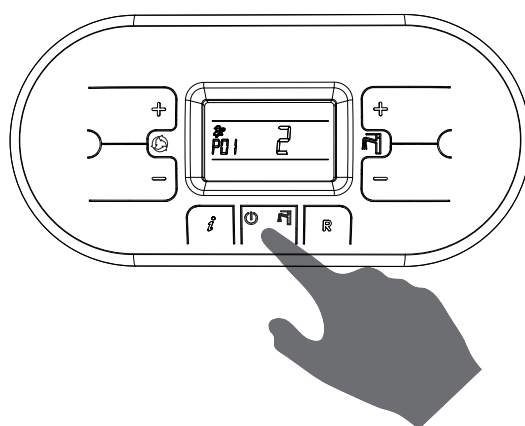
3. Use the keys  and  of the symbol recirculation  to select the parameter to be edited.

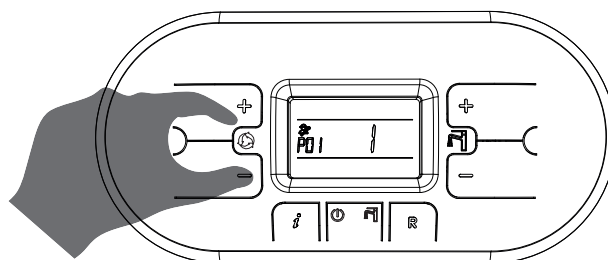




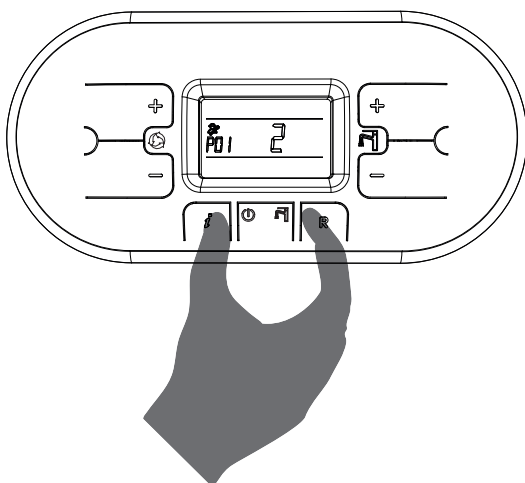
4. Use the keys '+' and '-' of the domestic circuit  to change the value of the parameter.



5. Press the key  to confirm the action and wait for the display to stop blinking, indication of the fact that the adjustment was implemented.



6. To exit the parameters menu, hold at the same time the keys '' and '' and wait for the symbol '' to appear on the display.





2.1.5. DIGITECH CS PARAMETERS TABLE

PARAMETER	DESCRIPTION	RANGE	FUNCTION
P00	SELECTION OF THE FIRE RATING	0 - 3	0 = 24 KW
			1 = 28 KW
			2 = 34 KW
			3 = 50 KW
P01	GAS TYPE SELECTION ATTENTION: READ THE INSTRUCTION IN CHAPTER 'GAS TRANSFORMATION' BEFORE CHANGING THIS PARAMETER.	0 - 1	0 = NATURAL GAS
			1 = LPG
P02	WATER HEATER TYPE SELECTION	0 - 1	0 = INSTANTANEOUS
			1 = STORAGE TANKLESS
P03	POST-CIRCULATION TIMING (RECIRCULATION MODE NON ACTIVE) THROUGH THIS PARAMETER YOU CAN SET THE PUMP OPERATION DURATION ON THE DOMESTIC CIRCUIT, AFTER THE TAP IS CLOSED.	0 - 90	VALUE EXPRESSED IN MULTIPLES OF 5 SECONDS (PRESET AT 12 X 5 = 60 SECONDS)
P04	POST-CIRCULATION TIMING (RECIRCULATION MODE ACTIVE) THROUGH THIS PARAMETER YOU CAN SET THE PUMP OPERATION DURATION ON THE DOMESTIC CIRCUIT, WHEN THE RECIRCULATION MODE IS ACTIVE, AFTER THE TAP IS CLOSED.	0 - 90	VALUE EXPRESSED IN MULTIPLES OF 5 SECONDS (PRESET AT 8 X 5 = 40 SECONDS)
P05	RECIRCULATION DIFFERENTIAL ACTIVATION THROUGH THIS PARAMETER YOU CAN ANTICIPATE THE RECIRCULATION FUNCTION, COMPARED TO THE RECIRCULATION SET POINT PRESET BY THE END-USER, BY MODIFYING THE TEMPERATURE DIFFERENCE.	5 - 15	VALUE EXPRESSED IN °C



2. FIRST START-UP

PARAMETER	DESCRIPTION	RANGE	FUNCTION
P06	FAN MINIMUM SPEED ADJUSTMENT THROUGH THIS PARAMETER YOU CAN SET THE FAN MINIMUM SPEED CORRESPONDING TO THE MINIMUM POWER OF THE BURNER. THE VALUE IS PRE-SET BASED ON THE SET POWER (SEE PARAMETER P00) AND ON THE GAS TYPE (SEE PARAMETER P01).	43 - 255	VALUE EXPRESSED IN HERTZ (1HZ = 30 RPM)
P07	FAN MAXIMUM SPEED ADJUSTMENT THROUGH THIS PARAMETER YOU CAN SET THE MAXIMUM FAN SPEED CORRESPONDING TO THE MAXIMUM POWER OF THE BURNER. THE VALUE IS PRE-SET BASED ON THE SET POWER (SEE PARAMETER P00) AND ON THE GAS TYPE (SEE PARAMETER P01).	43 - 255	VALUE EXPRESSED IN HERTZ (1HZ = 30 RPM)
P08	STARTING STEP ADJUSTMENT THROUGH THIS PARAMETER YOU CAN SET THE FAN SPEED DURING THE START-UP. THE VALUE IS PRE-SET BASED ON THE SET POWER (SEE PARAMETER P00) AND ON THE GAS TYPE (SEE PARAMETER P01).	43 - 255	VALUE EXPRESSED IN HERTZ (1HZ = 30 RPM)
P09	D.H.W RUN-DOWN THROUGH THIS PARAMETER YOU CAN SET THE TIME NECESSARY FOR THE WATER HEATER TO REACH THE MINIMUM SET POWER, AFTER THE BURNER START-UP.	02 - 15	VALUE EXPRESSED IN SECONDS (PRE-SET AT 3 SECONDS)
P10	TYPE OF UNIT SELECTION	0 - 1	0 = °C - l/min 1 = °F - gpm

2Tabellaparametri_MIAH404_firm.L225A_SFK_EN



2. FIRST START-UP

PARAMETER	DESCRIPTION	RANGE	FUNCTION
P16	DIFFERENTIAL OF THE STORAGE TANK CYCLE ACTIVATION THROUGH THIS PARAMETER YOU CAN ANTICIPATE THE PRE-HEATING FUNCTION OF THE STORAGE TANK, COMPARED TO THE D.H.W SET POINT PRE-SET BY THE END-USER, BY MODIFYING THE TEMPERATURE DIFFERENCE.	1 - 20	VALUE EXPRESSED IN °C (PRE-SET AT 5°C)
P17	MINIMUM D.H.W FLOW RATE SETTING THROUGH THIS PARAMETER YOU CAN SET THE MINIMUM D.H.W. FLOW RATE NECESSARY TO ACTIVATE THE WATER HEATER. THE VALUE IS PRE-SET BASED ON THE SET POWER (SEE PARAMETER P00).	20 - 68	VALUE EXPRESSED IN HERTZ 20 Hz = 1.5 l/min 28 Hz = 2 l/min 37 Hz = 2.5 l/min 45 Hz = 3 l/min 52 Hz = 3.5 l/min 59 Hz = 4 l/min 64 Hz = 4.5 l/min 68 Hz = 5 l/min
P18	ADDITIONAL POST-VENTILATION TIMING THROUGH THIS PARAMETER YOU CAN SET A PERIOD OF OPERATION, ADDITIONAL TO THE 20 STANDARD SECONDS OF THE FAN, AFTER THE BURNER SHUTDOWN.	20 - 120	VALUE EXPRESSED IN SECONDS (PRE-SET AT 30 SECONDS)
P19	ANTI-WATER HAMMER SELECTION ONCE THIS FUNCTION IS ENABLED, THE D.H.W CONTACT WILL BE DELAYED FOR A TIME EQUAL TO THE SET VALUE.	0 - 20	0 = DISABLED 1-20 = VALUE EXPRESSED IN SECONDS
P20	DESTINATION COUNTRY SELECTION BY MODIFYING THIS PARAMETER THE COMBUSTION CONTROL PARAMETERS WILL BE AUTOMATICALLY CONFIGURATED, ACCORDING TO THE VALUES FIXED IN THE DESTINATION COUNTRY OF THE PRODUCT.	0 - 1	0 = U.S.A. / CANADA 1 = DIFFERENT COUNTRY
P21	PUMP OPERATION IN WATER HEATER MODE THROUGH THIS PARAMETER YOU CAN ACTIVATE/DEACTIVATE THE CIRCULATING PUMP DURING THE NORMAL OPERATION OF THE WATER HEATER.	0 - 1	0 = DISABLED 1 = ENABLED



PARAMETER	DESCRIPTION	RANGE	FUNCTION
P22	ENABLING BUS INDUSTRIAL PILOTING 0 -10V THROUGH THIS PARAMETER YOU CAN ENABLE OR DISABLE THE BUS INDUSTRIAL INPUT 0-10 V TO SET THROUGH EXTERNAL BUS THE BURNER POWER OR THE DELIVERY TEMPERATURE.	0 - 2	0 = DISABLED (SET BY DEFAULT) 1 = TEMPERATURE CONTROL MODE 2 = POWER CONTROL MODE
P23	MODBUS MODE	0 - 2	0 = ENABLED 1 = ENABLED WITH SOME SETTINGS TO BE ADJUSTED FROM THE BOILER CONTROL PANEL 2 = DISABLED (SET BY DEFAULT)
P24	CONNECTION STATUS OF THE SOLAR AUXILIARY BOARD BY MEANS OF THIS PARAMETER, IT IS POSSIBLE TO ENABLE THE AUXILIARY BOARD FOR THE EXPANSION OF THE RESOURCES WHEN THE SOLAR AUXILIARY BOARD IS CONNECTED TO THE BOILER BOARD AUTOMATICALLY, THE VALUE OF THIS PARAMETER BECOMES '1', BUT IF THE SOLAR AUXILIARY BOARD IS SUCCESSIVELY DISCONNECTED, THE DISPLAY OF THE CONTROL PANEL OF THE BOILER WILL DISPLAY THE ERROR 'E31'. IN THIS CASE, IN ORDER TO DEACTIVATE THE ERROR 'E31', IT IS NECESSARY TO MANUALLY SET THE VALUE OF THE PARAMETER TO '0'.	0 - 1	0 = NOT INSTALLED 1 = INSTALLED



2. FIRST START-UP

PARAMETER	DESCRIPTION	RANGE	FUNCTION
P25	MODBUS COMMUNICATION BAUD RATE BY MEANS OF THIS PARAMETER, IT IS POSSIBLE TO SELECT THE MODBUS COMMUNICATION BAUD RATE SUPPORTED BY THE SAME INTERFACE.	0 - 5	0 = 9600
			1 = 1200
			2 = 2400
			3 = 4800
			4 = 9600
			5 = 19200
P26	MODBUS ADDRESS BY MEANS OF THIS PARAMETER, IT IS POSSIBLE TO SET THE ADDRESS OF THE BOARD ON MODBUS IN ORDER TO PERFORM A CASCADE SYSTEM.	1 - 16	BOILER NUMBERING FOR MODBUS (PRE-SET AT 1)



2.2. MAINTENANCE

2.2.6. GENERAL MAINTENANCE WARNINGS



DANGER

Before each components cleaning or replacement operation, ALWAYS cut off the POWER, WATER and GAS supply of the boiler.



WARNING

To ensure greater life span and proper operation of the device, during the maintenance operations use only original spare parts.



ATTENTION

To ensure the efficiency and safety of the device, the maintenance operations must be realized on an annual basis. The operations described below, are essential to the validity of the standard RADIANT warranty and must be performed by professionally qualified personnel in accordance with current legislation and authorized by RADIANT.

Please perform the following operations once a year:

- › check the sealing of the gas components, and replace if necessary the gaskets;
- › check the sealing of the water components, and replace if necessary the gaskets;
- › visually check the flame and the condition of the combustion chamber;
- › if necessary make sure that the combustion is suitably adjusted and if required proceed as indicated in section "CO2 VALUE CHECK AND CALIBRATION";
- › remove and clean the burner from oxidation;
- › check the integrity and the position of the sealed chamber sealing gasket;
- › check the primary exchanger, if necessary, clean it;
- › check the operation of the gas light up and safety systems. If necessary, remove and clean the flame detection and light up electrodes from incrustations paying attention to respect the distances with respect to the burner;
- › check the limit temperature safety thermostat; limit pressure safety;
- › check the pre-load pressure of the expansion vessel;
- › make sure that the permanent ventilation outlets are present, correctly sized and functioning, based on the installed devices. Respect the requirements provided by Local and National legislation;
- › periodically check the integrity of the fume exhaustion system for safety and proper operation;
- › check that the wiring is performed in compliance with the requirements in the water heater instruction manual;
- › check the wiring inside the control panel;
- › check the flow and temperature of domestic hot water;
- › check the proper operation of the condensate draining system, including the devices outside the water heater such as condensate collection devices installed along the path of the fume exhaust duct or neutralization devices for acid condensate.



2. MAINTENANCE

- › check that the liquid flow is not obstructed and that there are no combustion gas refluxes inside the internal system.



2.2.7. TECHNICAL DATA

Model		SFK 28
CE certification	no.	0476CQ0134
Gas category		II2H3B/P
Discharge type	type	B23p-B33-C13-C33-C43-C53-C63-C83-C93
Maximum nominal heat capacity in domestic circuit	kW	27
Minimum nominal heat capacity in domestic circuit	kW	3.7
Fumes temperature at nominal heat capacity	°C	55
Fumes temperature at minimum heat capacity	°C	32
CO ₂ at nominal heat capacity - G20	%	9,3 - 9,1
CO ₂ at minimum heat capacity - G20	%	9,0 - 8,8
CO ₂ at nominal heat capacity - G30	%	11,5 - 11,3
CO ₂ at minimum heat capacity - G30	%	10,75 - 10,65
CO ₂ at nominal heat capacity - G31	%	10,4 - 10,2
CO ₂ at minimum heat capacity - G31	%	9,95 - 9,85
CO at nominal heat capacity	ppm	72
Fumes mass at nominal heat capacity	g/s	11.93
Fumes mass at minimum heat capacity	g/s	1.69
Weighted Nox [0% O ₂] ppm	ppm	22
Weighted Nox [0% O ₂] mg/kWh	mg/kWh	39
Domestic circuit		
Adjustable domestic temperature	°C	35-60
Maximum pressure for domestic circuit	bar	8
Minimum pressure for domestic circuit	bar	0.5
Specific capacity in continuous service - Δt 30°C	litres/min	14.05
Dimensional characteristics		
Width	mm	410
Depth	mm	307
Height	mm	642
Gross weight	Kg	37
Water connections		
Cold water	Ø	3/4"
Hot water	Ø	3/4"
Gas	Ø	3/4"
D.H.W. circulating loop connection	Ø	3/4"
Fume exhaust fittings		
Maximum electric fan pressure available	Pa	76
Minimum electric fan pressure available	Pa	4
Max discharge length Ø60/100 - Hor Co-ax	m	6
Max discharge length Ø80/125 - Hor Co-ax	m	8
Max discharge length Ø50/50 - Hor Split	m	6
Max discharge length Ø60/60 - Hor Split	m	18
Max discharge length Ø80/80 - Hor Split	m	60
Max discharge length Ø50 - Hor duct	m	4
Max discharge length Ø60 - Hor duct	m	16



2. MAINTENANCE

Max discharge length Ø80 - Hor duct	m	35
Max discharge length Ø60/100 - Vert Co-ax	m	6
Max discharge length Ø80/125 - Vert Co-ax	m	8
Max discharge length Ø50/50 - Vert Split	m	6
Max discharge length Ø60/60 - Vert Split	m	18
Max discharge length Ø80/80 - Vert Split	m	60
Max discharge length Ø50 - Vert duct	m	4
Max discharge length Ø60 - Vert duct	m	16
Max discharge length Ø80 - Vert duct	m	35


Electrical specifications

Voltage-frequency	V/Hz	230/50
Max Absorbed Power	W	123
Insulation rate	IP	X5D

Gas supply


Nominal supply pressure - G20	mbar	20
D.H.W Max fan speed - G20	Hz	192
D.H.W Min. fan speed - G20	Hz	45
Fuel consumption - G20	m ³ /h	2.86
Nominal Supply pressure - G30	mbar	28-30
D.H.W Max fan speed - G30	Hz	180
D.H.W Min. fan speed - G30	Hz	45
Fuel consumption - G30	kg/h	2.13
Nominal Supply pressure - G31	mbar	37
D.H.W Max fan speed - G31	Hz	190
D.H.W Min. fan speed - G31	Hz	45
Fuel consumption - G31	kg/h	2.10

2.2.8. TECHNICAL ASSEMBLY

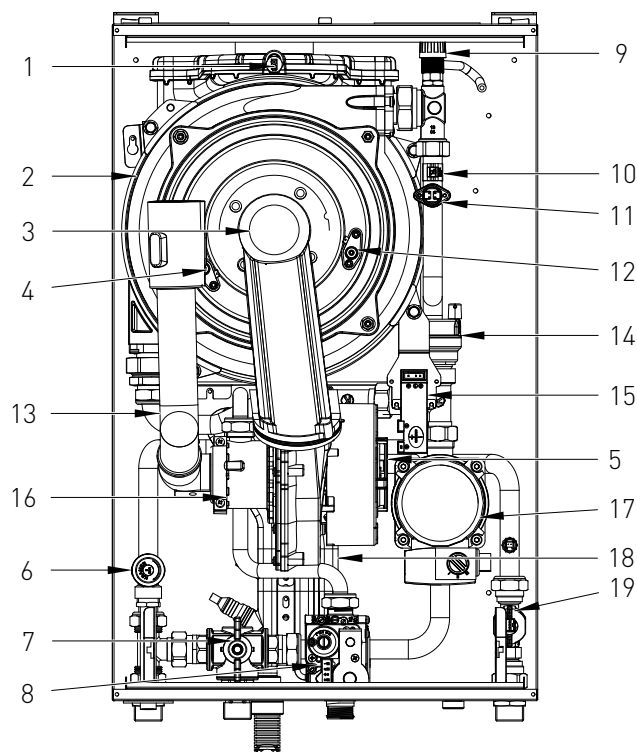**KEY**

1. FUMES SAFETY THERMOFUSE
2. HEAT EXCHANGER
3. BURNER UNIT
4. DETECTION ELECTRODE
5. ELECTRIC FAN
6. SAFETY VALVE 8 bar
7. DIVERter VALVE
8. GAS VALVE
9. MANUAL AIR RELIEF VALVE
10. DOMESTIC HOT WATER OUTLET PROBE
11. SAFETY THERMOSTAT
12. LIGHT UP ELECTRODE
13. AIR SUCTION TUBE
14. AUTOMATIC AIR RELIEF VALVE
15. START-UP TRANSFORMER
16. PROPORTIONAL VENTURI
17. CIRCULATOR
18. CONDENSATE COLLECTION SIPHON
19. FLUXMETER

2.2.9. HYDRAULIC BOARD

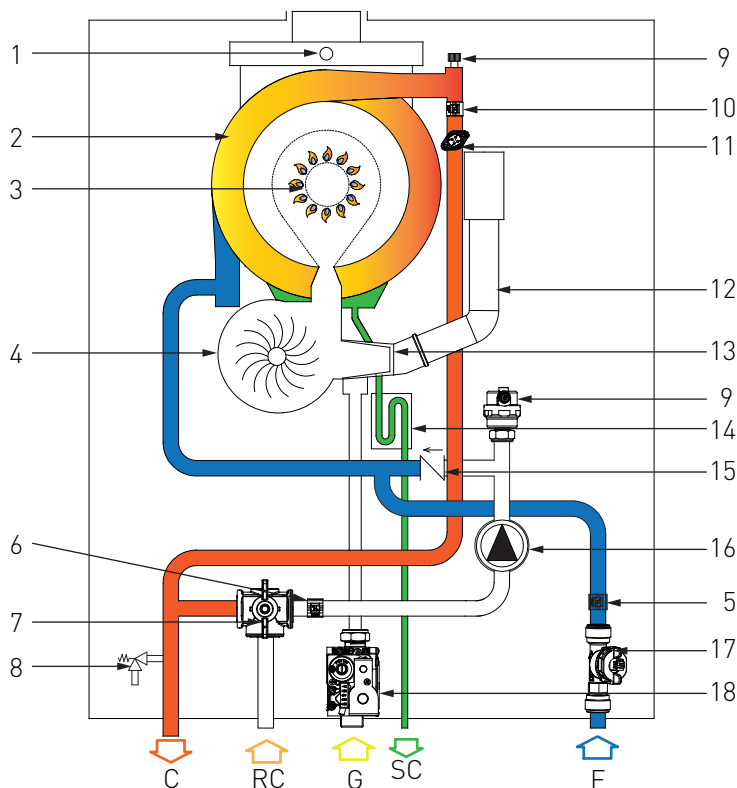

KEY


- C. DOMESTIC HOT WATER OUTLET
- RC. RECIRCULATION INLET
- G. GAS INLET
- SC. CONDENSATE DRAIN
- F. COLD WATER INLET

- 17. FLUXMETER
- 18. GAS VALVE


- 1. FUMES SAFETY THERMOFUSE
- 2. HEAT EXCHANGER
- 3. BURNER UNIT
- 4. ELECTRIC FAN
- 5. COLD WATER INLET PROBE
- 6. RECIRCULATION PROBE
- 7. DIVERter VALVE
- 8. SAFETY VALVE 8 bar
- 9. AIR RELIEF VALVE
- 10. DOMESTIC HOT WATER OUTLET PROBE
- 11. SAFETY THERMOSTAT
- 12. AIR SUCTION TUBE
- 13. PROPORTIONAL VENTURI
- 14. CONDENSATE COLLECTION SIPHON
- 15. NO RETURN VALVE
- 16. CIRCULATOR




OPERATIONAL SHEMES

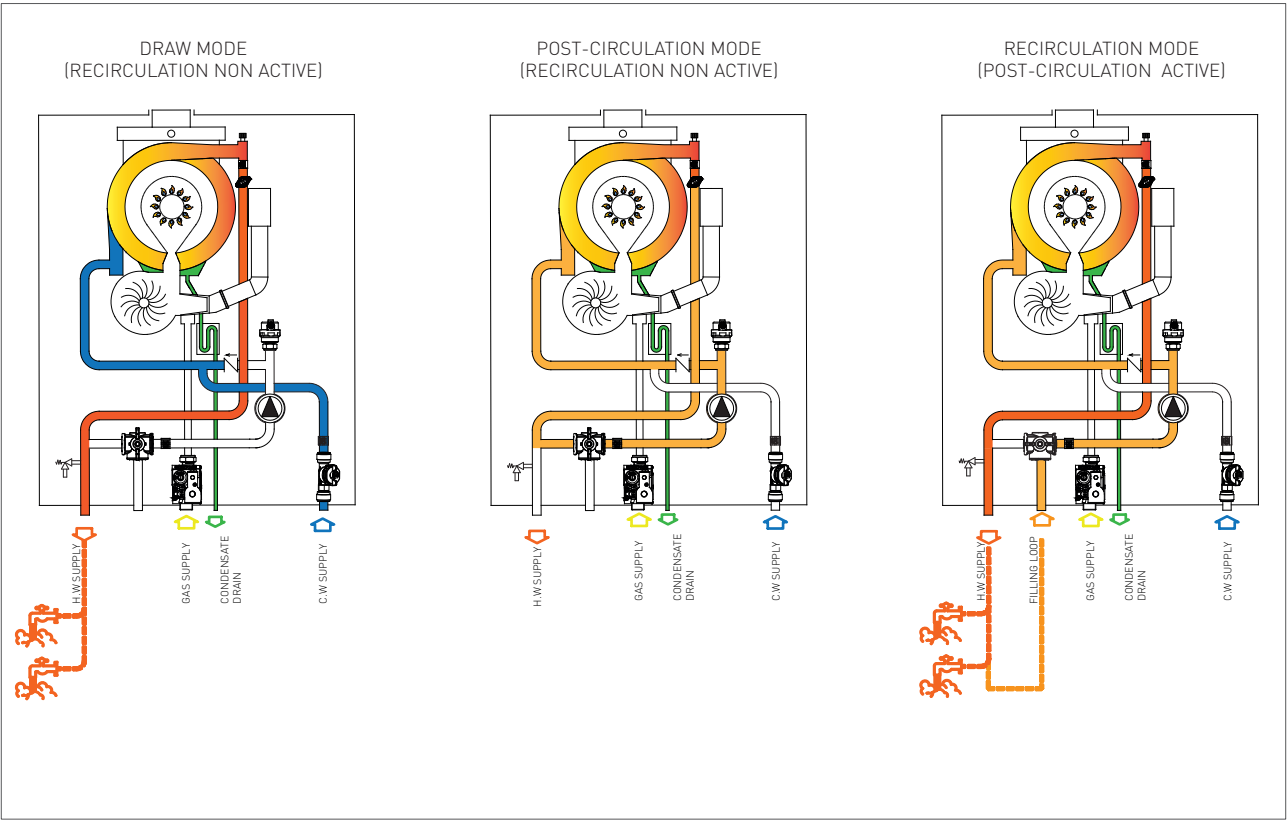

SUPPORT CENTRE

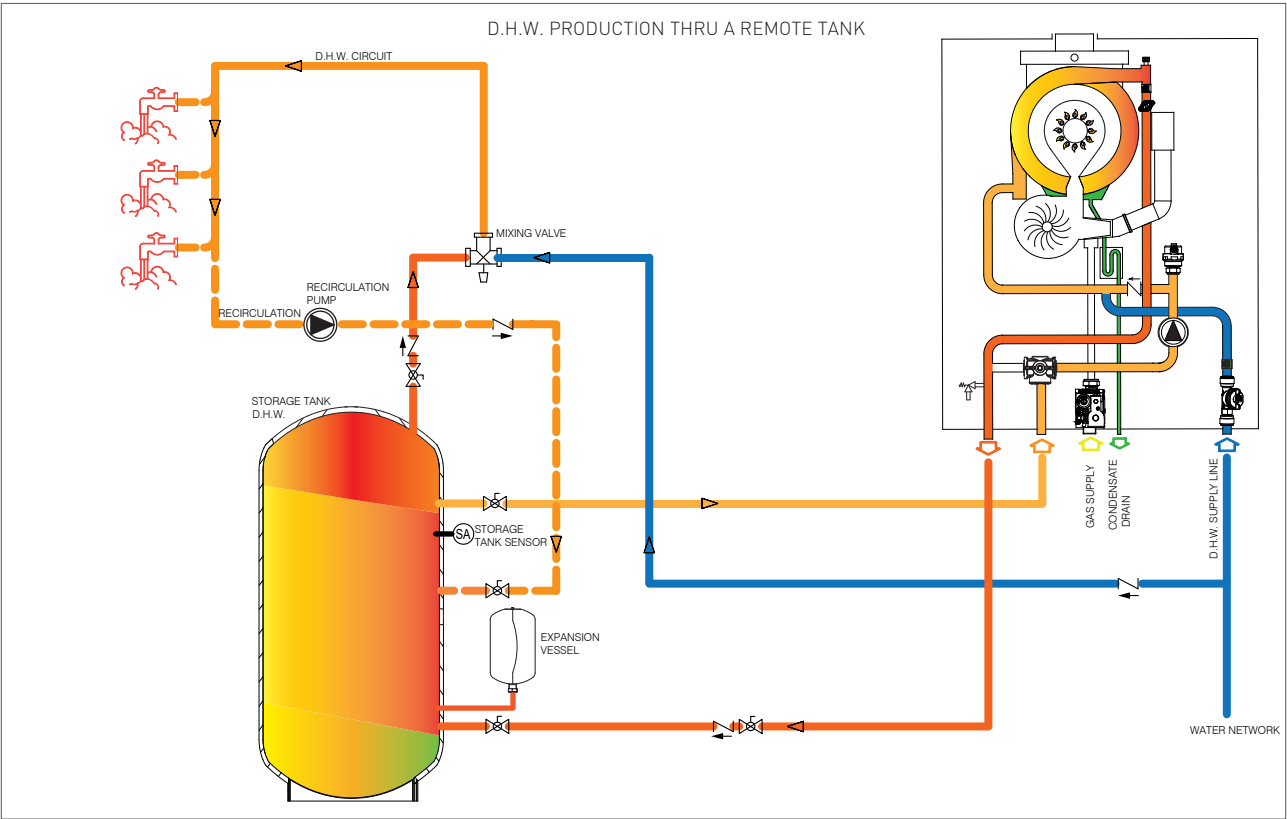

2.2.10. WIRING DIAGRAM

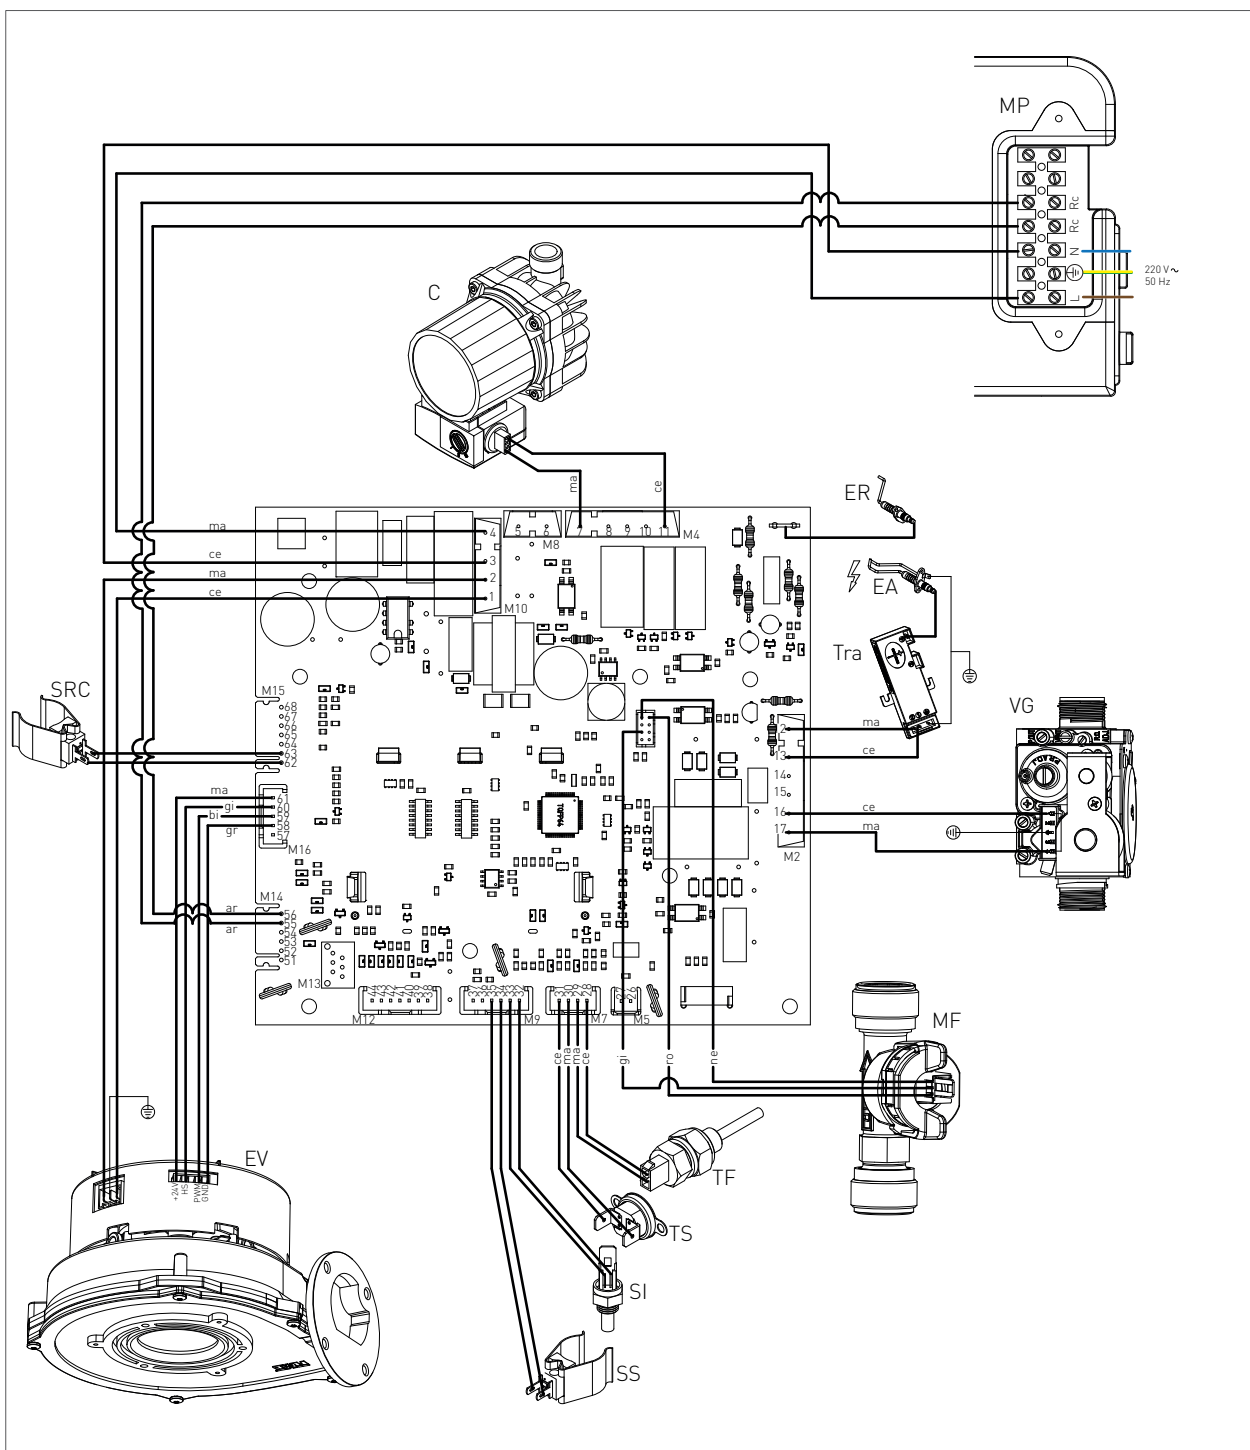

ER: DETECTION ELECTRODE

EA: START-UP ELECTRODE

C: CIRCULATOR

VG: GAS VALVE

TRA: START-UP TRANSFORMER

TF: FUMES THERMOFUSE (102°C)

MF: FLUXMETER

TS: SAFETY THERMOSTAT

SI: DOMESTIC CIRCUIT PROBE INLET

SS: DOMESTIC CIRCUIT PROBE

SRC: RECIRCULATION PROBE

MP: PANEL TERMINAL

EV: ELECTRIC FAN

RC: DOMESTIC HOT WATER PRE-HEATING
DEACTIVATION TIMER

L: LINE

N: NEUTRAL

NE: BLACK

RO: RED

CE: BLUE

MA: BROWN

AR: ORANGE

GI: YELLOW

BI: WHITE

GR: GREY

2.2.11. ACCESSING THE WATER HEATER

For the majority of the control and maintenance operations you have to remove one or more panels of the casing.

The side panels can be removed only after removing the front panel.

To intervene on the front of the water heater proceed as follows:

- › remove the fastening screws (1 - fig.1) placed on the lower edge of the front panel;
- › grab the front panel from the bottom and remove it pulling it to yourself and then upwards (see fig. 1).

To intervene on the side panels of the water heater proceed as follows:

- › remove the fastening screws (2 - fig.1) placed on the front edge of the side panel;
- › grab the bottom of the panel and remove it by moving it sideways and then pulling it upwards (see fig. 1).

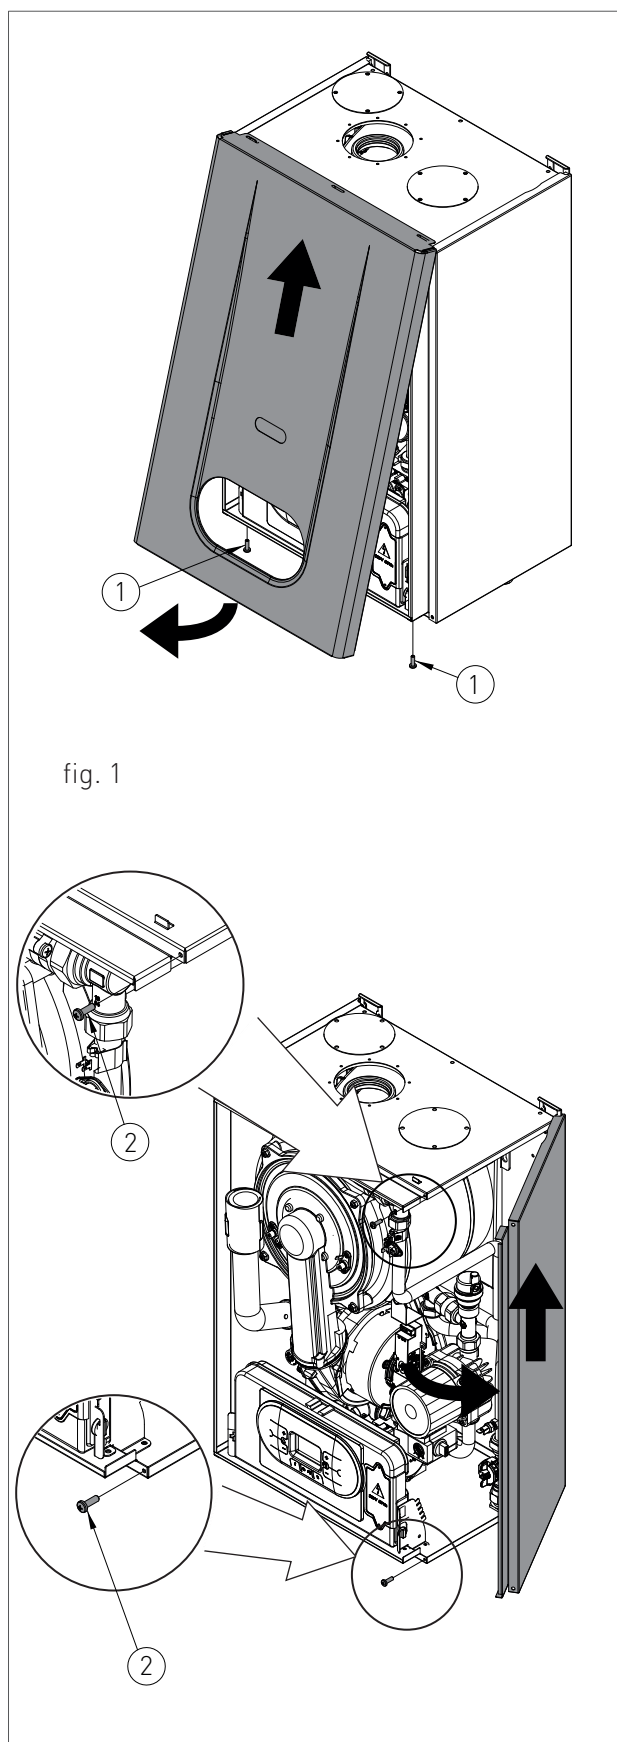


fig. 1

2.2.12. ACCESSING THE ELECTRONIC BOARD


In order to intervene on the wirings of the control panel, please proceed as follows:



DANGER

Cut off the voltage from the main switch.

- › Grab at the same time the support brackets of the control panel (fig. 1) loosening them and turn the panel downwards;
- › unscrew the four fastening screws 1 - fig. 1;
- › remove the crankcase pulling it upwards.

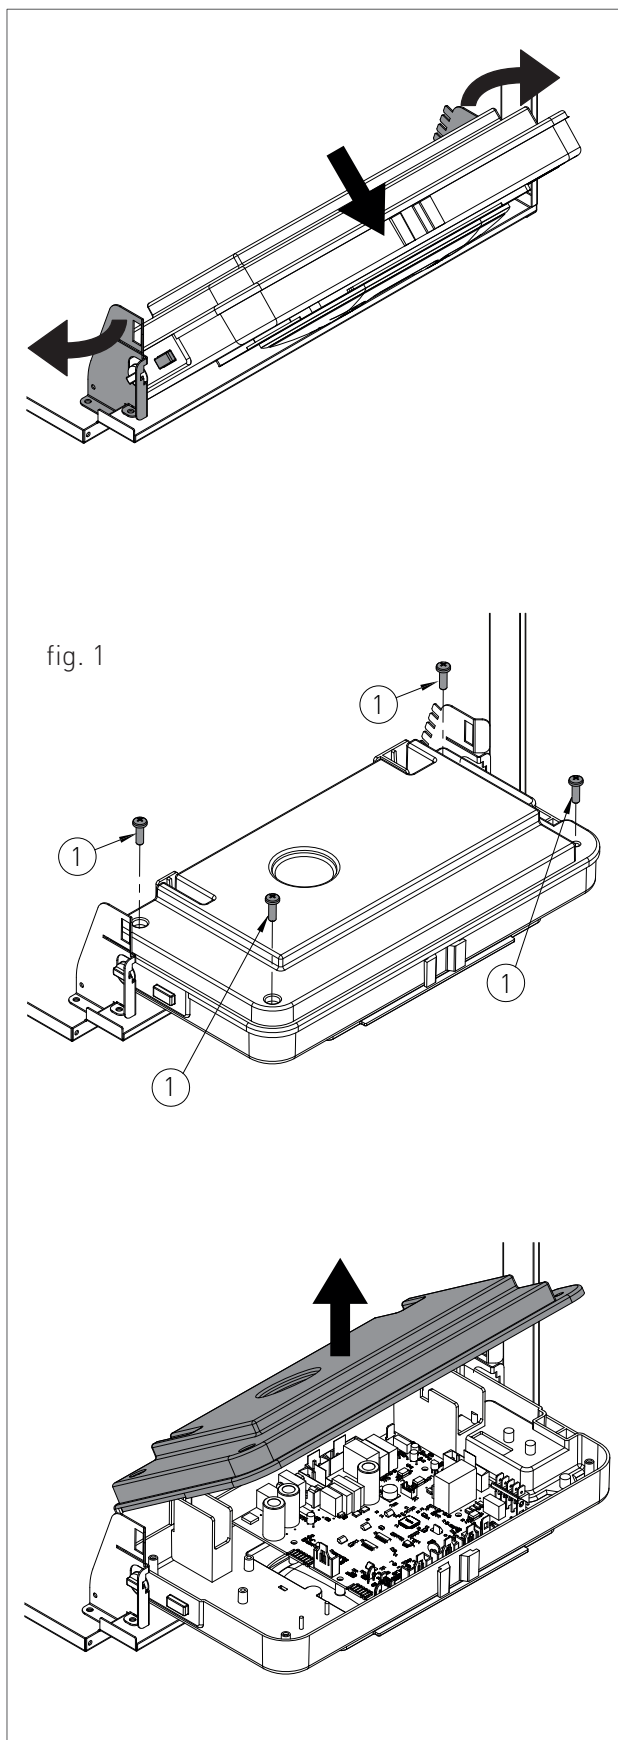



2.2.13. EMPTYING THE DOMESTIC SYSTEM








If there is freezing risk, you have to empty the domestic system as follows:


- › close the main supply tap of the water supply network;
- › open all cold and hot water taps;
- › after completing all operations, close the discharge tap and all previously opened water taps.



2. MAINTENANCE

2.2.14. FAULT SIGNALLING CODES


To view the last 5 fault signalling codes chronologically, starting with the most recent one, activate the 'OFF' mode by pressing the FUNCTION  key and hold the key INFO  for 5 seconds. Use keys  and  of the symbol recirculation  to scroll through the list of saved faults. To reset the fault history press the RESET  key. To exit display mode press the INFO  key.

CODE	FAULT	POSSIBLE CAUSE	SOLUTION	RESET
E01	FLAME BLOCK	NO FLAME LIGHT UP		MANUAL RESET (PRESS THE RESET  KEY).
		GAS MISSING;	CHECK THE ADDUCTION NETWORK;	
		MASS OR BROKEN START-UP ELECTRODE;	REPLACE IT;	
		GAS VALVE BROKEN;	REPLACE IT;	
		SLOW LIGHT UP TOO LOW ADJUSTMENT;	ADJUST MINIMUM OR SLOW LIGHT UP;	
		VALVE INFEEED PRESSURE TOO HIGH (ONLY FOR GPL WATER HEATERS).	CHECK THE MAXIMUM ADJUSTMENT PRESSURE	
		WITH FLAME LIGHT UP		
		NEUTRAL AND PHASE INVERTED POWER SUPPLY;	PROPERLY CONNECT THE POWER SUPPLY;	
		DETECTION ELECTRODE BROKEN;	REPLACE IT;	
		DETECTION ELECTRODE CABLE DISCONNECTED.	CHECK THE WIRING.	
		ELECTRICAL CURRENT PHASE-PHASE	IF THE TENSION MEASURES BETWEEN NEUTRAL AND GROUND IS ALMOST EQUAL TO THE ONE MEASURED BETWEEN PHASE AND GROUND, YOU HAVE TO INSTALL A PHASE-PHASE TRANSFORMER KIT (COD. 88021LA)	




SUPPORT CENTRE



2. MAINTENANCE

CODE	FAULT	POSSIBLE CAUSE	SOLUTION	RESET
E21	GENERAL INTERNAL BOARD ERROR	INCORRECT SIGNAL RECOGNITION BY THE MODULATION BOARD MICRO-PROCESSOR.	IF THE MODULATION BOARD DOES NOT RESET THE ERROR AUTOMATICALLY, REPLACE IT.	AUTOMATIC.
E22	PARAMETERS PROGRAMMING REQUEST	MICRO-PROCESSOR MEMORY LOSS.	PARAMETERS REPROGRAMMING.	MANUAL RESET (CUT OFF THE TENSION).
E31	SOLAR AUXILIARY BOARD CONNECTION FAULTS	SOLAR AUXILIARY BOARD DISCONNECTED.	SET MANUALLY THE VALUE OF PARAMETER P24 TO '0'.	AUTOMATIC.
E32	COMMUNICATION ERROR BETWEEN THE WATER HEATER BOARD AND THE MODBUS BOARD	NO ELECTRICAL CONNECTION; MODBUS BOARD BROKEN;	CHECK THE WIRING; REPLACE IT;	AUTOMATIC.
E35	RESIDUAL FLAME	FAULTY DETECTION ELECTRODE; FAULTY DETECTION ELECTRODE CABLE; FAULTY MODULATION BOARD.	CLEAN IT OR REPLACE IT; REPLACE IT; REPLACE IT.	MANUAL RESET (PRESS THE RESET  KEY).
E40	SUPPLY VOLTAGE	SUPPLY VOLTAGE OFF THE OPERATION RANGE (≤ 160 VOLTS).	CHECK THE POWER SUPPLY NETWORK (THE ERROR DEACTIVATES AUTOMATICALLY AS SOON AS THE SUPPLY VOLTAGE FALLS BACK WITHIN THE REQUESTED LIMITS).	AUTOMATIC.
E52	COMMUNICATION FAULT BETWEEN MODBUS CONTROLLER AND MODBUS CONTROL UNIT	NO ELECTRICAL CONNECTION; MODBUS CONTROL UNIT BROKEN.	CHECK THE WIRING; REPLACE IT;	AUTOMATIC.

SUPPORT CENTRE

CODE	FUNCTION	DESCRIPTION
F09	<i>D.H.W CIRCUIT ANTI-FREEZE</i>	<p>WHEN THE SANITARY SENSOR DETECTS A TEMPERATURE BELOW 5°C, THE PUMP RUNS AND THE BURNER LIFTS UP THE TEMPERATURE TO 20°C.</p> <p>WHEN THIS LATTER TEMPERATURE IS ACHIEVED, THE BURNER SHUTS OFF AND THE PUMP RUNS FOR 20 SECONDS AS POST CIRCULATION.</p>
F28	<i>ANTI-LEGIONELLA</i>	<p>THE FUNCTION IS ACTIVATED FOR THE FIRST TIME, 60 MINUTES AFTER THAT THE WATER HEATER HAS BEEN ELECTRICALLY POWERED.</p> <p>STARTING FROM THAT MOMENT IT COMES AUTOMATICALLY INTO OPERATION EVERY 7 DAYS, BRINGING THE HOT WATER TEMPERATURE OF THE STORAGE CYLINDER UP TO 60°C. THIS FUNCTION IS ENABLED INDEPENDENTLY FROM THE CONTACT TO THE CYLINDER CLOCK, PROVIDING THAT THE RELATIVE PARAMETER (P15) IS ENABLED.</p>
FH	<i>FAST H2O</i>	<p>YOU CAN ACTIVATE/DEACTIVATED IT BY HOLDING SIMULTANEOUSLY AND FOR 7 SECONDS THE RESET  AND  OF THE SYMBOL RECIRCULATION . THE "FAST H2O" FUNCTION GUARANTEES THE IMMEDIATE D.H.W SUPPLY AT THE REQUESTED TEMPERATURE.</p>

2.2.16. GAS TYPE TRANSFORMATION



ATTENTION

Make sure that the gas adduction tube is suitable for the new type of fuel with which the water heater is supplied.

- › loosen the two screws '1' (fig.1) from the fastening bush, and remove the air suction tube;
- › unscrew the tube coupling that connects the gas valve to venturi;
- › unscrew the three fastening screws '2' (fig.1) of the venturi 'V' (fig.1) using a 10 key, as shown in figure 2;
- › remove the two screws '3' (fig.3) and apply pressure on the rear side of venturi 'C' (fig.3);
- › replace the body venturi with the one suitable for the type of supply gas (cod. 30-00166 for methane / cod. 30-00169 for GPL) and make sure the tooth 'D' (fig.3) is adjusted downwards on the aluminium ring nut (see fig.3);
- › remount the components following the demounting operations in reverse making sure that gasket 'G' is re-assembled as shown in fig.1;
- › set the water heater to operate with the new type of gas, changing the value of the parameter P01 'GAS TYPE SELECTION' from the control panel (see chapters 'DIGITECH CS PARAMETERS TABLE' and 'ACCESSING AND PROGRAMMING THE PARAMETERS');
- › adjust the CO₂ combustion value as indicated in chapter 'CO₂ VALUE CHECK AND CALIBRATION'.

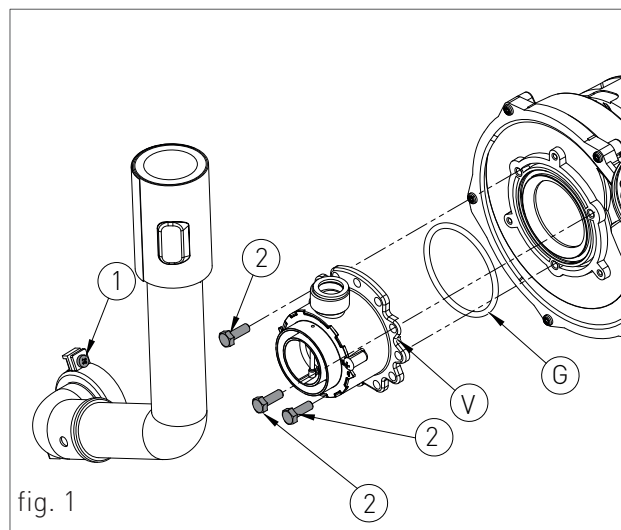


fig. 1

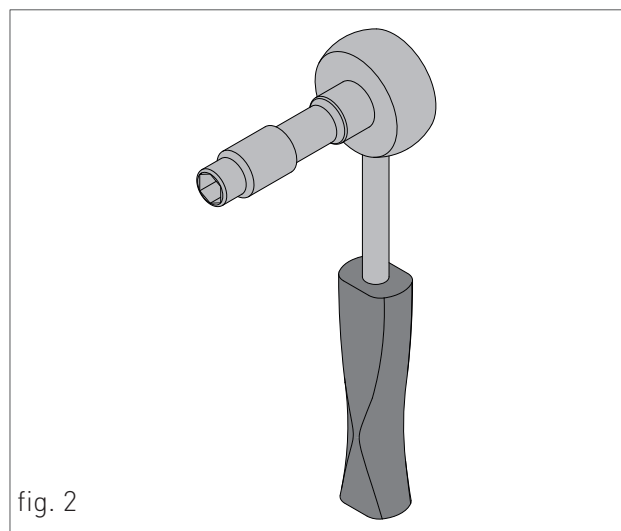


fig. 2

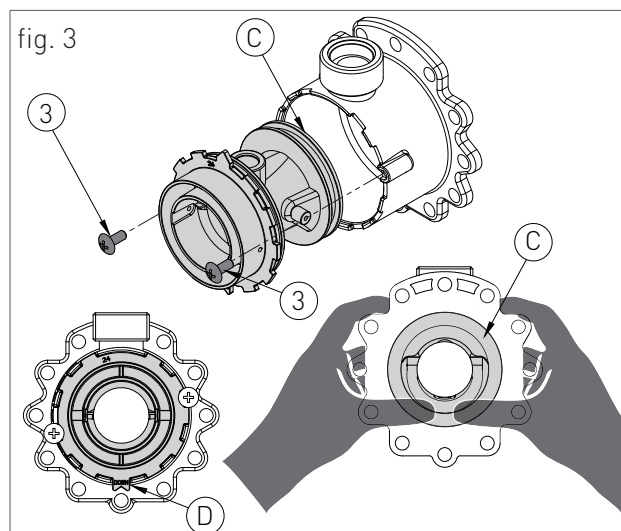


fig. 3



3. USER SECTION

The operations described in this section are addressed to all those who will use the machine. The machine must be used and accessed only by qualified operators that fully read and understood the User section, paying particular attention to the warnings.

3.1. USE

3.1.1. GENERAL USE WARNINGS

**WARNING**

Before starting the water heater the User must make sure that the First start-up certificate has the stamp of the technical Support Centre proving the testing and the first start-up of the water heater .

**WARNING**

To validate the warranty, the water heater must be started by a technical Support Centre authorized by RADIANT no later than 30 days from the date of installation.

**WARNING**

In order to take advantage of the guarantee provided by the manufacturer, the customer should carefully and exclusively observe the instructions given in the USER section of the manual.

**ATTENTION**

This machine may be used only for the purpose for which it has been designed: heat water to a temperature below boiling point at atmospheric pressure. Any other use is considered wrong and dangerous. The manufacturer is excluded from any contractual or out of contract responsibility for damage caused to people, animals or property due to incorrect use.

**DANGER**

The water heater should not be used by persons (including children) with reduced physical, sensory or mental capacities or without suitable knowledge or experience unless they are instructed on the device use or monitored by a person responsible for their safety.

**DANGER**

DO NOT obstruct the air vents of the location in which the gas device is installed to prevent the formation of toxic explosive mixes.

**DANGER**

If you sense a gas odour in the location in which the water heater is installed, proceed as follows:


- › DO NOT use electrical switches, the telephone or any other device that might generate electrical discharges or sparks;
- › Immediately open all doors and windows to create an air exchange that can quickly clean the location;
- › Close the gas valves;
- › Request immediate intervention of qualified staff.

**DANGER**

The use of the electrical power water heater implies respecting some fundamental rules such as:

- › DO NOT touch the device with wet and/or humid parts and/or with bare feet;
- › DO NOT pull the electrical cables;
- › DO NOT leave the device exposed to atmospheric agents (rain, sun, etc.) unless specifically intended;
- › in case of cable damage, turn off the device and contact qualified professional staff to replace it.

3.1.2. CONTROL PANEL

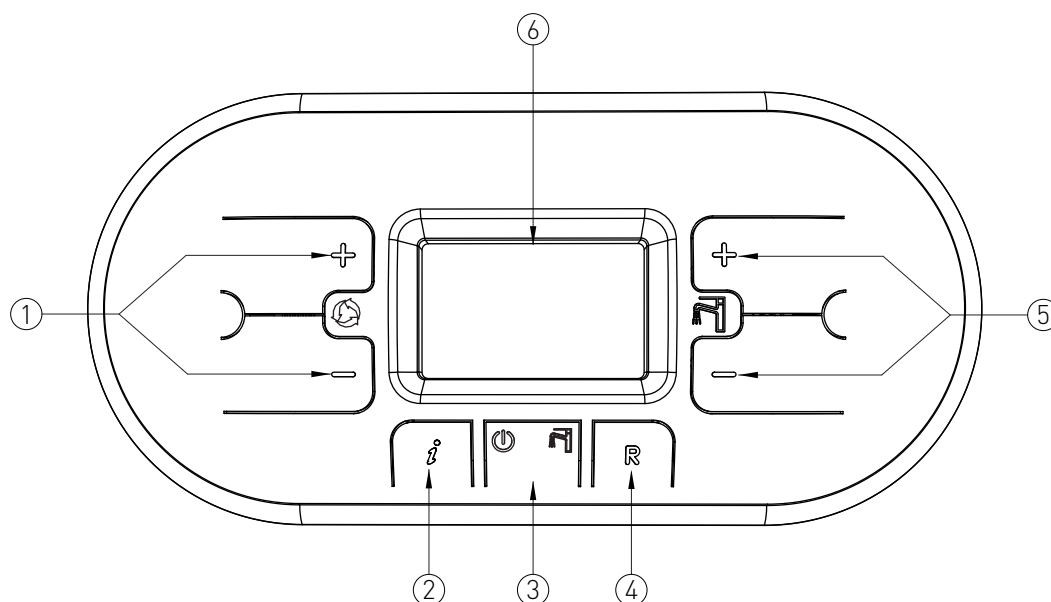



KEY

1. RECIRCULATION MODE TEMPERATURE ADJUSTMENT KEYS
2. INFO KEY: PRESS ONCE TO VIEW THE TEMPERATURES AND OTHER INFORMATION (see chapter 'INFO MENU DISPLAY') - HOLD FOR 5 SECONDS, IN OFF OPERATING MODE, TO VIEW THE LAST 5 FAULTS
3. OPERATING MODE SELECTION KEY: ON/ OFF
4. RESET KEY: FAULTS RESET
5. DOMESTIC HOT WATER TEMPERATURE ADJUSTMENT KEY / HOLD THE KEYS AT THE SAME TIME FOR 5 SECONDS TO ACTIVATE DISPLAY BACK LIGHT FOR 10 MINUTES
6. DISPLAY

3.1.3. DISPLAY ICONS



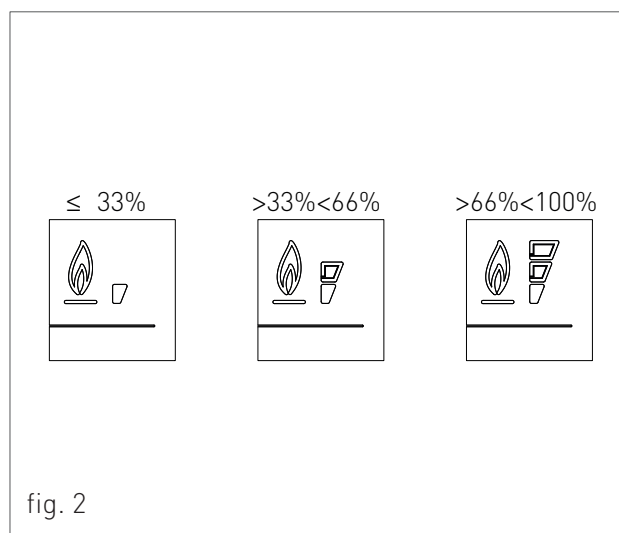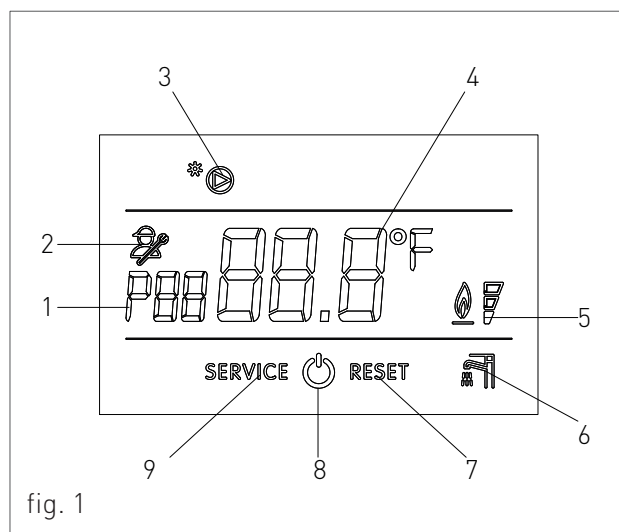


KEY

1. INDICATION OF PARAMETER NUMBER / DISPLAYED INFO CODE / RECIRCULATION MODE ACTIVE (fig.1)
2. PARAMETERS PROGRAMMING FUNCTION ACTIVE
3. RECIRCULATION PUMP ACTIVE
4. TEMPERATURE DISPLAY / SET POINT / PARAMETER VALUE
5. FLAME PRESENT SIGNALLING / IT ALSO INDICATES, ON 3 PERCENTAGE LEVELS, THE MODULATING POWER LEVEL OF THE WATER HEATER (fig.2)
6. OPERATION IN DOMESTIC MODE ENABLED
7. ERROR DISPLAY THAT CAN BE RESET
8. OFF OPERATING MODE
9. ERROR DISPLAY THAT CAN NOT BE RESET





3.1.4. INFO MENU DISPLAY DATA

To view the water heater data from info menu you just have to press the INFO  key. The info code will be displayed on the left side of the screen and its relative value will be displayed on the centre of the screen. Use keys  and  of the symbol recirculation  to scroll through the list of displayed data. To exit display mode press the INFO  key.


LIST OF DISPLAYED DATA

INFO CODE	DESCRIPTION
d0	COLD CIRCUIT INLET PROBE TEMPERATURE
d1	HOT WATER CAPACITY
d2	FAN SPEED
d4	RECIRCULATION PROBE TEMPERATURE




3.1.8. FAULT SIGNALLING CODES

The water heater might signal some faults by displaying a code. Below you have a list of the codes and of the operations to be performed in order to unlock the water heater.

CODE	ICON	FAULT	INTERVENTION
E01	RESET	FLAME BLOCK	<p>MAKE SURE THAT THE WATER HEATER AND CONTACTOR GAS VALVES ARE OPEN.</p> <p>PRESS THE RESET  BUTTON ON THE CONTROL PANEL TO RESET THE FAULT, AS SOON AS THE ERROR CODE DISAPPEARS FROM THE DISPLAY, THE WATER HEATER WILL START AUTOMATICALLY.</p> <p>IF THE BLOCK PERSISTS CONTACT THE TECHNICAL SUPPORT CENTRE.</p>
E02	RESET	SAFETY THERMOSTAT	CONTACT THE TECHNICAL SUPPORT CENTRE.
E03	RESET	FUMES SAFETY THERMOFUSE (102 °C)	CONTACT THE TECHNICAL SUPPORT CENTRE.
E05	SERVICE	INLET PROBE (COLD WATER)	CONTACT THE TECHNICAL SUPPORT CENTRE.
E06	SERVICE	DOMESTIC CIRCUIT PROBE	CONTACT THE TECHNICAL SUPPORT CENTRE.
E15	SERVICE	RECIRCULATION MODE PROBE	CONTACT THE TECHNICAL SUPPORT CENTRE.
E16	SERVICE	ELECTRIC FAN	CONTACT THE TECHNICAL SUPPORT CENTRE.
E21	SERVICE	GENERAL INTERNAL BOARD ERROR	<p>CUT OFF THE POWER SUPPLY FROM THE MAIN SWITCH AND THEN RESTORE IT, AS SOON AS THE ERROR CODE DISAPPEARS, THE WATER HEATER WILL RESTART AUTOMATICALLY.</p> <p>IF THE BLOCK PERSISTS CONTACT THE TECHNICAL SUPPORT CENTRE.</p>
E22	SERVICE	PARAMETERS REQUEST	<p>PROGRAMMING</p> <p>CUT OFF THE POWER SUPPLY FROM THE MAIN SWITCH AND THEN RESTORE IT, AS SOON AS THE ERROR CODE DISAPPEARS, THE WATER HEATER WILL RESTART AUTOMATICALLY.</p> <p>IF THE BLOCK PERSISTS CONTACT THE TECHNICAL SUPPORT CENTRE.</p>






3. USE

CODE	ICON	FAULT	INTERVENTION
E31	SERVICE	SOLAR AUXILIARY BOARD CONNECTION FAULTS	CONTACT THE TECHNICAL SUPPORT CENTRE.
E32	SERVICE	COMMUNICATION ERROR BETWEEN THE WATER HEATER BOARD AND THE MODBUS BOARD	CONTACT THE TECHNICAL SUPPORT CENTRE.
E35	RESET	RESIDUAL FLAME	PRESS THE RESET  BUTTON ON THE CONTROL PANEL TO RESET THE FAULT, AS SOON AS THE ERROR CODE DISAPPEARS FROM THE DISPLAY, THE WATER HEATER WILL START AUTOMATICALLY.
E40	SERVICE	SUPPLY VOLTAGE	CONTACT THE TECHNICAL SUPPORT CENTRE.
E52	SERVICE	COMMUNICATION FAULT BETWEEN MODBUS CONTROLLER AND MODBUS CONTROL UNIT	CONTACT THE TECHNICAL SUPPORT CENTRE.



3.1.9. ACTIVE FUNCTIONS SIGNALLING CODES

CODE	FUNCTION	INTERVENTION
F09	D.H.W CIRCUIT ANTI-FREEZE FUNCTION ACTIVE	WAIT UNTIL THE OPERATION IS COMPLETED
F28	A N T I - L E G I O N E L L A FUNCTION	WAIT UNTIL THE OPERATION IS COMPLETED
FH	FAST H2O	YOU CAN ACTIVATE/ D E A C T I V A T E D IT BY HOLDING SIMULTANEOUSLY AND FOR 7 SECONDS THE RESET  AND  OF THE SYMBOL RECIRCULATION  .

3.1.10. FAST H2O FUNCTION

The Fast H2O function keeps a constant temperature in the DHW circuit within the water heater, according to the temperature set by the user.

The Fast H2O function offers three advantages:

- › the hot water is immediately supplied at the requested temperature.
- › unnecessary delays are avoided by increasing the comfort of the final user.
- › water wastes are limited waiting that the water reaches the right temperature.

To activate/deactivate the Fast H2O function please follow the instruction indicated in the paragraph 'ACTIVE FUNCTIONS SIGNALLING CODES'.



3.1.11. MAINTENANCE

To ensure proper water heater safety and efficiency, please contact RADIANT technical support network to check the device every year.

An accurate maintenance should improve system management.

3.1.12. COVER CLEANING

Clean the cover of the device using a wet cloth and come neutral soap.



WARNING

DO NOT use abrasive or powder detergents as they might damage the plastic cover and control elements.

3.1.13. DISPOSAL

The water heater and all its accessories must be differentiated, suitably disposed of in accordance with the standards in force.



The use of the symbol WEEE (Waste Electrical and Electronic Equipment) shows that this

product can not be dismantled as domestic waste. Proper dismantle of this product helps preventing potentially negative consequences on human health and environment.



RADIANT BRUCIATORI s.p.a.

Via Pantanelli, 164/166 - 61025 Loc. Montelabbate (PU)

Tel. +39 0721 9079.1 • fax. +39 0721 9079279

e-mail: info@radiant • Internet: <http://www.radiant.it>